

Avid® Nitris™ DNA

System Setup Guide

Version 7.6

for HP® Workstation xw8200
and HP Workstation xw8000

Copyright and Disclaimer

Product specifications are subject to change without notice and do not represent a commitment on the part of Avid Technology, Inc.

The software described in this document is furnished under a license agreement. You can obtain a copy of that license by visiting Avid's Web site at www.avid.com. The terms of that license are also available in the product in the same directory as the software. The software may not be reverse assembled and may be used or copied only in accordance with the terms of the license agreement. It is against the law to copy the software on any medium except as specifically allowed in the license agreement.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of Avid Technology, Inc.

Copyright © 2005 Avid Technology, Inc. and its licensors. All rights reserved. Printed in USA.

The Avid DS and Avid DS Nitris application uses JScript and Visual Basic Scripting Edition from Microsoft Corporation.

Attn. Government User(s). Restricted Rights Legend

U.S. GOVERNMENT RESTRICTED RIGHTS. This Software and its documentation are "commercial computer software" or "commercial computer software documentation." In the event that such Software or documentation is acquired by or on behalf of a unit or agency of the U.S. Government, all rights with respect to this Software and documentation are subject to the terms of the License Agreement, pursuant to FAR §12.212(a) and/or DFARS §227.7202-1(a), as applicable.

Trademarks

888 I/O, Adrenaline, AirPlay, AirSPACE, AirSPACE HD, AniMatte, AudioSuite, AudioVision, AutoSync, Avid, Avid DNA, Avid DNxHD, AVIDdrive, AVIDdrive Towers, Avid Mojo, AvidNet, AvidNetwork, AVIDstripe, Avid Unity, Avid Xpress, AVoption, AVX, CamCutter, ChromaCurve, ChromaWheel, DAE, D-Fi, D-fx, Digidesign, Digidesign Audio Engine, Digidesign Intelligent Noise Reduction, DigiDrive, Digital Nonlinear Accelerator, DigiTranslator, DINR, D-Verb, Equinox, ExpertRender, FieldPak, Film Composer, FilmScribe, FluidMotion, HIIP, HyperSPACE, HyperSPACE HDCAM, IllusionFX, Image Independence, Intraframe, iS9, iS18, iS23, iS36, Lo-Fi, Magic Mask, make manage move | media, Marquee, Matador, Maxim, MCXpress, Media Composer, MediaDock, MediaDock Shuttle, Media Fusion, Media Illusion, MediaLog, Media Reader, Media Recorder, MEDIArry, MediaShare, Meridien, MetaSync, NaturalMatch, Nearchive, NetReview, NewsCutter, Nitris, OMF, OMF Interchange, OMM, Open Media Framework, Open Media Management, ProEncode, Pro Tools, QuietDrive, Recti-Fi, RetroLoop, rS9, rS18, Sci-Fi, Softimage, Sound Designer II, SPACE, SPACEShift, Symphony, the Avid|DS logo, Trilligent, UnityRAID, Vari-Fi, Video Slave Driver, VideoSPACE, and Xdeck are either registered trademarks or trademarks of Avid Technology, Inc. in the United States and/or other countries.

iNEWS, iNEWS ControlAir, and Media Browse are trademarks of iNews, LLC.

Adaptec is a trademark which may be registered in some jurisdictions. ATTO is a trademark of ATTO Technology, Inc. FireGL is a trademark of ATI Technologies, Inc. HP is a registered trademark of Hewlett-Packard Company. Mac OS is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. OpenGL is a registered trademark of Silicon Graphics, Inc., in the United States and/or other countries worldwide. UNIX is a registered trademark of The Open Group in the U.S. and other countries. Wacom is a registered trademark of Wacom Company, Ltd. in the United States and/or other countries. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. All other trademarks contained herein are the property of their respective owners.

GOT FOOTAGE?

Editors — Filmmakers — Special Effects Artists — Game Developers — Animators — Educators — Broadcasters — **Content creators of every genre** — Just finished an incredible project and want to share it with the world?

Send us your reels and we may use your footage in our show reel or demo!*

For a copy of our release and Avid's mailing address, go to www.avid.com/footage.

*Note: Avid cannot guarantee the use of materials submitted.

Avid Nitris DNA System Setup Guide Version 7.6 • 0130-05571-02B • February 2005

Contents

| | | |
|-----------|--|----|
| | Using This Guide | 9 |
| | Symbols and Conventions | 9 |
| | Mouse, Pen, and Keyboard | 10 |
| | If You Need Help | 11 |
| | Avid DS Customer Support | 12 |
| | E-mail Support | 12 |
| | Web Support | 12 |
| | Upload Utility | 12 |
| | Avid Community Forum | 13 |
| | How to Order Documentation | 13 |
| | Avid Educational Services | 13 |
| Chapter 1 | Avid DS Overview and Site Preparation | 15 |
| | Package Contents | 16 |
| | Hardware | 16 |
| | Software | 17 |
| | Documentation | 17 |
| | Site Planning | 19 |
| | Environmental Requirements | 19 |
| | Electrical Requirements | 19 |
| | Space Requirements | 21 |
| | Additional Equipment | 23 |

| | | |
|-----------|--|----|
| Chapter 2 | Avid DS Hardware Overview | 25 |
| | Back Panel Overview | 25 |
| | HP Workstation xw8200 Slot Configuration and Connections | 26 |
| | HP Workstation xw8000 Slot Configuration and Connections | 28 |
| | Avid Nitris Base Board Connections | 29 |
| | Port Locations | 30 |
| | Rear SCSI Connectors | 31 |
| | ATTO Optical Fibre Channel Board Connector | 31 |
| | Disk Subsystem | 32 |
| | System Inputs and Outputs | 33 |
| | Audio Peripherals | 34 |
| | Signal Flow | 34 |
| | Capture Mode | 34 |
| | Playback Mode | 35 |
| | House Sync | 35 |
| | Tri-level Sync | 36 |
| | Sync Topology | 37 |
| | Installing and Removing the Avid Fan | 38 |
| Chapter 3 | Assembling the System | 41 |
| | Before Assembling the System | 41 |
| | Avid Nitris DNA | 42 |
| | Front Panel | 42 |
| | Rear Panel | 43 |
| | Connecting the Keyboard, Mouse, and Graphic Tablet | 49 |
| | Connecting the Monitors | 50 |
| | Connecting the Avid Nitris DNA | 52 |
| | Connecting the Application Key (Dongle) | 53 |
| | Connecting the SCSI Local Storage Systems | 54 |
| | Avid MediaDock Ultra320 | 55 |
| | Avid MediaDock LVD | 56 |

| | | |
|------------|--|-----------|
| | Fibre Channel Local Storage | 58 |
| | Avid Unity MediaNetwork | 59 |
| | Connecting the Machine Control Cable | 59 |
| | Connecting the USB-to-MIDI Converter | 60 |
| | Connecting Peripheral Devices | 61 |
| | Video Connections | 61 |
| | Qualified VGA Outputs | 62 |
| | Audio Connections | 63 |
| Chapter 4 | Rack Mounting the Avid Nitris DNA Enclosure | 67 |
| | Equipment Environmental and Safety Guidelines | 67 |
| | Installing the Avid Nitris DNA in a Rack | 68 |
| | Attaching the Rack Nuts to the Rack | 68 |
| | Securing the Avid Nitris DNA in a Rack | 70 |
| Appendix A | Regulatory and Safety Notices | 73 |
| | Warnings and Cautions | 73 |
| | FCC Notice | 73 |
| | Canadian ICES-003 | 74 |
| | European Union Notice | 74 |
| | Australia and New Zealand EMC Regulations | 76 |
| | Taiwan EMC Regulations | 77 |
| | Index | 79 |

Illustrations

| | |
|---|----|
| Avid DS System Configuration | 21 |
| Rear View of xw8200 System | 26 |
| xw8000 Back Panel Overview | 28 |
| Avid Nitris Base Board Connections | 30 |
| Avid Nitris Base Board Connections | 30 |
| Mouse, Keyboard, and Application Key Connections | 30 |
| ATTO Fibre Channel Connection | 31 |
| A typical star pattern sync topology | 37 |
| Placing the Fan Into the System | 38 |
| Lowering Fan Into Place. | 39 |
| Plugging the Fan | 39 |
| Avid Nitris DNA Front Panel | 42 |
| Avid Nitris DNA Rear Panel | 44 |
| HD Video I/O Board Connectors | 45 |
| Eight-Channel Audio I/O Board Connectors. | 46 |
| SD Video I/O Board Connectors | 47 |
| Connecting the Keyboard, Mouse, and Wacom Tablet | 49 |
| NVIDIA Quadro FX 3400 Graphics Board in the xw8200 Workstation. | 50 |
| ATI FireGL X2-256t Board in the xw8000 Workstation | 50 |
| Connecting the Avid Nitris DNA | 52 |
| Parallel Port Location | 53 |
| SCSI Connections at the Rear of the System | 54 |
| Recommended Storage Configuration | 56 |
| ATTO 3300 Fibre Channel Board Slot Location. | 58 |
| dataMate Adapter | 59 |
| USB-to-MIDI Converter | 60 |
| Connecting Video Devices | 62 |
| Audio Input and Output Cable | 64 |
| Audio Input and Output Connections | 64 |

Audio Monitoring Connection 65

Positioning the Avid Nitris DNA..... 69

Attaching Rack Nuts onto the Rack Enclosure 70

Installing an Avid Nitris DNA..... 71

Tables

| | |
|---|----|
| System Hardware | 16 |
| Avid DS Documentation | 17 |
| Electrical Specifications | 20 |
| Hardware Component Dimensions | 22 |
| Additional Equipment | 23 |
| HP Workstation xw8200 Slot Configurations | 27 |
| HP Workstation xw8000 Slot Configurations | 29 |
| Disk Drive Information | 32 |
| System Inputs and Outputs | 33 |
| Avid Nitris DNA LEDs | 43 |
| HD Video I/O Board Identifiers | 45 |
| Eight-Channel Audio I/O Board Identifiers | 46 |
| SD Video I/O Board Identifiers | 47 |

Using This Guide

Congratulations on your purchase of an Avid® DS system. You can use your system to create broadcast-quality output incorporating every possible production element from full-speed, high-resolution footage to multimedia artwork and animation, to computer-generated effects and titling.

This guide is intended for anyone who is setting up an Avid DS Nitris system for the first time, for anyone who might be moving a system, and for anyone who might be attempting to solve problems that can arise with the system hardware. This guide is *not* designed for someone who is installing board sets in the system.



The documentation describes the features and hardware of all models. Therefore, your system might not contain certain features and hardware that are covered in the documentation.

Symbols and Conventions

Avid documentation uses the following symbols and conventions:

| Symbol or Convention | Meaning or Action |
|----------------------|--|
| | A note provides important related information, reminders, recommendations, and strong suggestions. |
| | A caution means that a specific action you take could cause harm to your computer or cause you to lose data. |
| | A warning describes an action that could cause you physical harm. Follow the guidelines in this document when handling electrical equipment. |

| Symbol or Convention | Meaning or Action |
|--------------------------|--|
| > | This symbol indicates menu commands (and subcommands) in the order you select them. For example, File > Import means to open the File menu and then select the Import command. |
| ► | This symbol indicates a single-step procedure. Multiple arrows in a list indicate that you need to perform one of the actions listed. |
| Margin tips | In the margin, you will find tips that help you perform tasks more easily and efficiently. |
| <i>Italics</i> | Italics is used to emphasize certain words and to indicate variables. |
| Courier Bold font | Courier Bold font identifies text that you type. |
| Bold | Bold indicates a user interaction. |
| Ctrl+key or mouse action | Press and hold the first key while you press the last key or perform the mouse action. For example, Shift+Alt+C or Ctrl+drag. |

Mouse, Pen, and Keyboard

You can use a two-button mouse (with wheel) or a pen and tablet. The left and right mouse buttons perform different operations. Unless otherwise stated, use the left mouse button.

The mouse and pen operate slightly differently. All the procedures in this guide are documented for the mouse. You can, however, easily use a pen or the keyboard.

| This Term | Means This with a Mouse | Means This with a Pen |
|-----------|--|--|
| Click | Quickly click and release the left mouse button. Always use the left mouse button unless otherwise stated. | Tap the tablet once with the tip of the pen, or touch the pen to the tablet with enough pressure to click. |

| This Term | Means This with a Mouse | Means This with a Pen |
|--|--|--|
| Double-click | Click the left mouse button twice rapidly. | Quickly tap the tablet twice in the same screen pixel or press the F5 key to go from single to double-click. |
| Right-click | Quickly click and release the right mouse button. | Press the top portion of the switch on the side of the pen or press the F6 key to go from left to right-click. |
| Drag | Click and hold the left mouse button or the wheel while you move the mouse. | Press the pen to the tablet while moving the pen. |
| Alt+ <i>key</i> , Ctrl+ <i>key</i> , Shift+ <i>key</i> , <i>etc.</i> | Press and hold the first key while you press the second key. For example, “Press Alt+F1” means to press and hold the Alt key while you press the F1 key. | |

If You Need Help

If you are having trouble using your system:

1. Retry the action, carefully following the instructions given for that task in this guide. It is especially important to check each step of your workflow.
2. Check for the latest information that might have become available *after* the documentation was published in one of two locations:
 - If release notes are available, they ship with your application.
 - If ReadMe files are available, they are supplied in your Avid application folder. ReadMe files are also available from Help.
3. Check the documentation that came with your Avid application or your hardware for maintenance or hardware-related issues.
4. For Customer Support, see [“Avid DS Customer Support” on page 12](#) or call 800-800-AVID (800-800-2843).

Avid DS Customer Support

The following sections describe various Avid DS Customer Support options.

E-mail Support

The e-mail address for Avid DS Customer Support is: **dssupport@avid.com**.

You can use it for sending bug reports, usability questions, and avidds.cab audit reports for system analysis. All e-mails are logged in the support database and assigned a case number. Send one support request per e-mail.



It is mandatory that you include your SID number in the body of your e-mail message for verification of your maintenance contract and case logging. Otherwise, response will be delayed.

Web Support

The Avid DS Support Center at <http://www.softimage.com/avidds> provides quick access to a wide range of resources from the Avid DS teams and user community. Downloads, including presets, drivers, and Quick Fix Engineering (QFE), provide the latest solutions for use with your Avid DS system. Online documentation, tutorials, and Knowledge Base articles ensure that you get the most out of your work with Avid DS. It's like having a dedicated Avid DS Customer Support engineer sitting at your desk!

Upload Utility

For troubleshooting purposes, you can upload your files for Avid DS Customer Support personnel to examine. You can upload a project's archive, media files, or other necessary data. Simply zip the files that you need to upload and use a short name (for easy retrieval), such as archive.zip or Case274877.zip.

To upload your files:

1. Go to the Avid web site at <http://www.softimage.com/avidds>.
2. Select **Contact > Upload Tool**.

Avid Community Forum

Although the Avid DS community forum is frequently monitored by Avid employees, it is not part of the official support channels. You are invited to send your support requests to any of the above channels when required.

If you have an e-mail account, you can join the worldwide network of Avid DS users exchanging ideas. The mailing list has proven to be quite useful for users, and there is a constant stream of new subscribers.

To subscribe, send an e-mail to **majordomo@softimage.com** with the following text in the body of your message: **subscribe ds**. You can get further information on using the automated list server by e-mailing **majordomo@softimage.com** with “help” as your message.

You can also join other Avid forums on the Avid web site at <http://www.avid.com>. Select **Support > Forums**.

How to Order Documentation

To order additional copies of this documentation from within the United States, call Avid Sales at 800-949-AVID (800-949-2843). If you are placing an order from outside the United States, contact your local Avid representative.

You can also download printable PDF versions of the documentation from the Avid DS Customer Support web site at <http://www.softimage.com/avidds>.

Avid Educational Services

For information on courses/schedules, training centers, certifications, courseware, and books, please visit www.avid.com/training or call Avid Sales at 800-949-AVID (800-949-2843).

Using This Guide

Chapter 1

Avid DS Overview and Site Preparation

This chapter provides an overview of the Avid DS hardware, software, and documentation included with your Avid DS Nitris for HP Workstation xw8200 and HP Workstation xw8000 systems and the information you need to prepare your site for the Avid DS hardware.

This chapter contains the following sections:

- [Package Contents](#)
- [Site Planning](#)
- [Additional Equipment](#)

Package Contents

Your Avid DS Nitris system contains hardware, software, and documentation.

Hardware

After carefully unpacking the hardware, verify all of the items on the packing slip before setting up your workstation. Make sure that you write down the serial number of all the devices.

A typical Avid DS system includes the hardware listed in the following table.

System Hardware

| Device | Device, cables, and accessories |
|---|--|
| HP Workstation xw8200 or HP Workstation xw8000 | Base unit, keyboard, mouse, two optical cables, power cord, and rackmount kit (optional) |
| Flat-panel monitors (21-inch monitors from previous Avid DS systems are also supported) | Two 18-inch flat-panel monitors, two monitor cables and two VGA to DVI adapters, and two power cables |
| Avid MediaDock™ LVD or Avid MediaDock Ultra320 local storage system | MediaDock LVD or MediaDock Ultra320 enclosure with LVD or Ultra320 shuttle drives and power cables |
| (Option) Avid MEDIArray II™ local storage | Fibre Channel controller board, an Avid MEDIArray II enclosure with a minimum of four Fibre Channel drives for standard definition (SD) or eight drives for high definition (HD) storage, and a power cord |
| (Option) Avid Unity™ MediaNetwork Fibre Channel storage system | Fibre Channel controller board. Enclosures depend on the Avid Unity MediaNetwork system ordered |
| Avid Nitris™ Digital Nonlinear Accelerator (DNA) | Avid Nitris DNA, digital interlink cable, three audio harness cables, and a power cord Avid installs two PCI boards in the HP workstation that support the Avid Nitris DNA |
| (Option) Wacom® tablet | Tablet, pen and stand, USB cable, and 4D mouse |
| RS-232 to RS-422 convertor for deck control | Convertor, an RS-232 cable, and an RS-422 cable |

Software

Most of the software that you receive on CD-ROM is also installed on your workstation's hard drive.



Keep the Software, Drivers, and Recovery CD-ROMs in a safe place in case you need to reinstall the software or any of the drivers.

The Avid DS Nitris software package contains:

- Avid DS Nitris Software CD-ROM
- Avid DS Nitris Drivers CD-ROM
- An Avid DS Nitris Recovery CD-ROM for the HP workstation
- Software protection key (dongle)

Your computer system comes with the following software components pre-installed:

- Windows XP Professional and Windows XP Service Pack 2 software
- Wacom Technology software
- NVIDIA® Quadro® FX 3400 software in the HP Workstation xw8200 or ATI FireGL™ X2-256t software in the HP Workstation xw8000



The documentation for the software components is also shipped with the system.

Documentation

The following table describes the complete Avid DS Nitris documentation set.

Avid DS Documentation

| Document | Format | Version | Description |
|-----------------------------|--------|---------|---|
| Release Notes | Online | 7.6 | Describes known problems and provides workarounds. Also describes and includes video presentations of the new features in v7.6 of Avid DS Nitris. |
| Setup Guide (this document) | Print | 7.6 | Provides an overview of the Avid DS system and describes how to connect the different sections of system. |

Avid DS Documentation (Continued)

| Document | Format | Version | Description |
|-------------------------------------|---------------|----------------|--|
| Installation & Administration Guide | Online/Print | 7.6 | Provides information on installing and upgrading the current version of Avid DS and its components. Also contains workstation administration tasks and troubleshooting information. |
| Getting Started Guide | Online/Print | 7.6 | Contains quick step-by-step instructions to help you get started on the basic post-productions tasks. |
| Compositing & Effects Guide | Online/Print | 7.6 | Describes the basic types of effects in Avid DS Nitris and shows you how to apply them to your media. There's also information on when and how to process effects. |
| Capture and Output Guide | Online/Print | 7.6 | Describes the processes of capturing material into the Avid DS Nitris system and outputting a finished sequence. |
| Editing Guide | Online/Print | 7.6 | Describes the work processes of Avid DS Nitris. It shows you how to work with your media and perform basic and advanced editing. |
| Help | Online | 7.6 | Contains the complete set of task and reference information on Avid DS Nitris. |
| Keyboard Shortcuts | Online | 7.6 | Contains all the Avid DS Nitris keyboard shortcuts for the Avid DS application. Keyboard shortcuts available in the Help. |
| Online Library | Online | 7.6 | The complete set of Avid DS Nitris books in Acrobat PDF format on the Avid DS Customer Support web site at http://www.softimage.com/avidds . |
| Vendor documentation | Print | — | Guides from the vendors of the various hardware and software components that comprise your Avid DS Nitris workstation. ^a |

a. For details on setting up, handling, and maintaining these components, see the documentation included with each of them.

Site Planning

When preparing your site, you must consider the environmental, electrical, and space requirements for your Avid DS Nitris workstation, as well as any additional equipment that you may need to purchase and its requirements.

Environmental Requirements

The site you choose for your Avid DS Nitris workstation should meet the following environmental requirements:

- Clean and dust free
- Free from significant temperature or humidity changes
- Sturdy, level, and not subject to vibration
- Away from radio frequency emissions, high-traffic, or high-noise areas
- Provides adequate space in front of and behind the workstation components, so that you can connect cables and service your workstation. This also provides adequate airflow for cooling.
- A minimum clearance of 3 inches (7.6 cm) for the side and back panels of the desktide base unit
- A table (or other surface) that is at least 60 inches wide by 48 inches deep (150 cm × 120 cm) for the editing workstation

Electrical Requirements

Your site should meet the following electrical requirements:

- Adequate power for each workstation component, so that extension cords are not needed.
- At least two 15-amp circuits available: one for the workstation, Nitris DNA, and accessories and one for the Avid MediaDock LVD storage system.
- Site is away from major electrical equipment, such as motors, air conditioners, or elevators.
- Site is not subject to static electrical buildup.

- Uses an uninterruptible power supply (UPS) to protect your workstation from sudden power surges or losses, and to save you from the resulting loss of work.



Plug only your Avid DS Nitris equipment into the power strip. Do not plug in coffee makers, radios, lights, or other such devices.

The following table describes the electrical specifications for the Avid DS system.

Electrical Specifications

| Component | Voltage | Frequency |
|--|--|-------------|
| HP Workstation xw8200 | 100 to 240 V ac auto-ranging | 50 to 60 Hz |
| HP Workstation xw8000 | 100 to 250 V ac auto-ranging | 50 to 60 Hz |
| Monitors | 100 to 250 V ac | 50 to 60 Hz |
| Avid Nitris DNA | 100 to 240 V ac | 50 to 60 Hz |
| Avid MediaDock LVD and Avid MediaDock Ultra320 storage systems | 90 to 264 V ac | 50 to 60 Hz |
| Avid MEDIArray Fibre Channel storage (included with SD version of Avid DS Nitris only) | 100 to 240 V ac | 50 to 70 Hz |
| Wacom tablet | 120 V ac (North America) 220 V ac (International) | 60 Hz |


Space Requirements

Your workstation includes either a tower or rackmount base unit, the video storage array, and two flat-panel monitors. You can place the workstation base unit and the video storage enclosure next to your work area or in a rack as shown in the following figure.



You can also use monitors from previous Avid DS systems.

Avid DS System Configuration

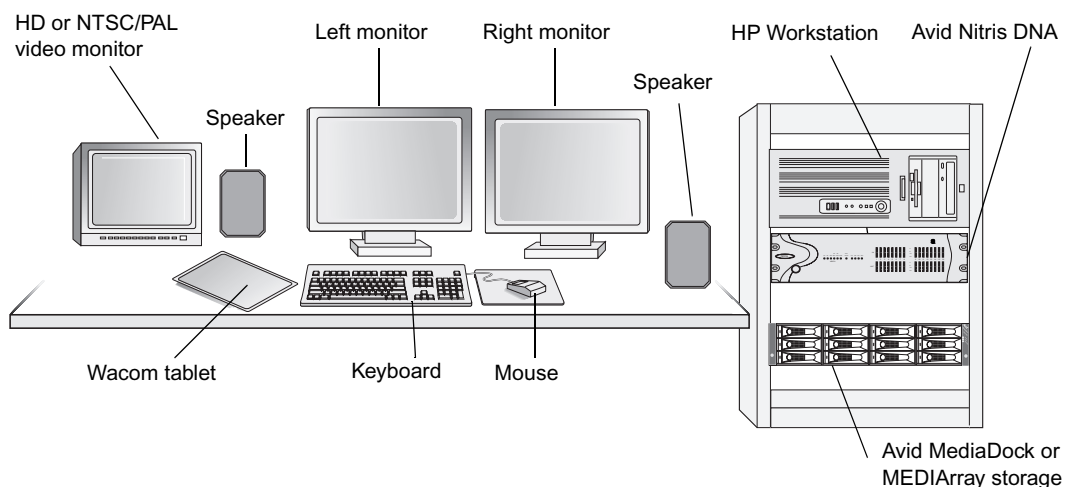

The speakers and video monitor are purchased separately. The video monitor and the computer monitors should be placed at least 12 inches (30 cm) apart. Placing them closer together may cause synchronization interference on the computer monitors.

If you purchase the optional rackmount kit for the base unit, it mounts in a standard 19-inch (48.26 cm) equipment rack. The Avid Nitris DNA, MEDIArray, and MediaDock storage system can also be mounted in the same or another equipment rack. For information on mounting the Avid Nitris DNA, see [Chapter 4](#).

The following table lists the dimensions of the major hardware components.

Hardware Component Dimensions

| Hardware component | Dimensions (Inches) | Dimensions (Centimeters) |
|--|--|---|
| HP Workstation xw8200 Rackmount configuration — Rack Units: 5 | Height: 17.9 Depth: 20.7 Width: 8.3 | Height: 45.4 Depth: 52.5 Width: 21.0 |
| HP Workstation xw8000 Rackmount configuration — Rack Units: 5 | Height: 17.7 Depth: 20.3 Width: 8.3 | Height: 44.9 Depth: 51.5 Width: 21.0 |
| 18-inch flat-panel monitors (with stand) | Height: 15.9 Width: 15.7 Depth: 7.9 | Height: 40.3 Width: 39.8 Depth: 7.4 |
| Avid Nitris DNA Rackmount configuration — Rack Units: 3 | Height: 5.3 Width: 17.6 Depth: 13 | Height: 13.5 Width: 44.7 Depth: 33.02 |
| Avid MediaDock Ultra320 Tower configuration (SD and HD version of Avid DS Nitris only) | Height: 21.5 Width: 10.5 Depth: 21.5 | Height: 54.6 Width: 26.7 Depth: 54.6 |
| Avid MediaDock Ultra320 Rackmount configuration — Rack Units: 2 (SD and HD version of Avid DS Nitris only) | Height: 3.5 Width: 17.6 Depth: 20.3 | Height: 89 Width: 44.7 Depth: 51.5 |
| Avid MediaDock LVD Tower configuration | Height: 18.8 Width: 10.5 Depth: 17.6 | Height: 47.7 Width: 26.7 Depth: 44.7 |
| Avid MediaDock LVD Rackmount configuration — Rack Units: 2 | Height: 5.3 Width: 17.6 Depth: 17.4 | Height: 13.5 Width: 44.7 Depth: 44.2 |
| Avid MEDIArray Tower configuration (SD version of Avid DS Nitris only) | Height: 26.8 Width: 9.8 Depth: 29.4 | Height: 68.0 Width: 24.9 Depth: 74.7 |
| Avid MEDIArray Rackmount configuration — Rack Units: 3 (SD version of Avid DS Nitris only) | Height: 6.1 Width: 17.5 Depth: 24.0 | Height: 15.45 Width: 44.5 Depth: 60.9 |
| Wacom tablet | Width: 9.0 Depth: 12.0 | Width: 22.9 Depth: 30.5 |

Additional Equipment

The following table lists the additional peripherals and cables required for a typical Avid DS Nitris workstation.

Additional Equipment

| Device | Description |
|------------------------------|---|
| House sync generator | <p>The house sync must have the same video format (NTSC or PAL) as your video equipment, as well as the project that you create in Avid DS Nitris.</p> <p>You will need a tri-level sync generator for HD projects.</p> |
| Video monitor | HD or NTSC/PAL |
| HD video cable | Use high-quality video cable certified for HDTV. |
| Videotape recorder (VTR) | <p>VTRs connect to the base unit through an RS-422 cable and RS-232 signal converter.</p> <p>For a list of approved HD VTRs, contact your Avid DS reseller.</p> |
| Video distribution amplifier | Distributes the house sync signal between separate devices including the Avid Nitris DNA equipment. |
| Digital waveform monitor | Measures the luminance and chrominance video signals |
| Speakers and amplifier | Analog and/or digital audio equipment and converters for converting audio signals |
| USB-MIDI | The USB port provides control of external controllers, such as the JL Cooper MCS-3800. MIDI control requires a separately purchased cable and the proper MIDI driver. |

Chapter 2

Avid DS Hardware Overview

This chapter provides an overview of the Avid DS hardware included with your Avid DS Nitris workstation.

This chapter contains the following sections:

- [Back Panel Overview](#)
- [Disk Subsystem](#)
- [System Inputs and Outputs](#)
- [Signal Flow](#)
- [House Sync](#)
- [Installing and Removing the Avid Fan](#)

Back Panel Overview


The currently supported HP workstations are described in the following sections. The connections used by Avid DS on the rear of the these workstations are also identified.

HP Workstation xw8200 Slot Configuration and Connections

Avid has qualified the xw8200 workstation with the NVIDIA Quadro FX 3400 graphics board to be used with the Avid Nitris DNA. The following figure identifies the slots and connections on the rear of the xw8200 workstation.



The back panel also contains ports for connecting the mouse, keyboard, monitors, and application key (dongle).

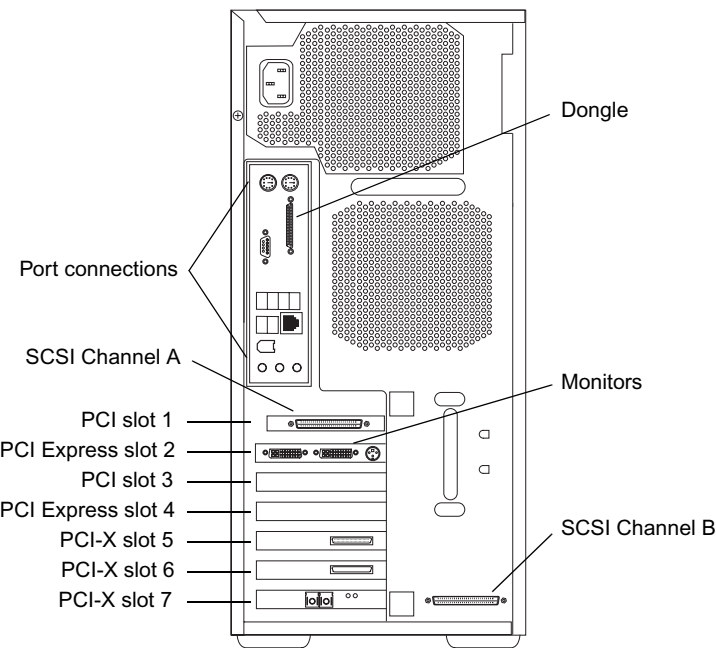Rear View of xw8200 System



The following table lists the Avid qualified slot configuration and function of each expansion board installed in the xw8200 workstation. For details on the graphics board specifications and system configuration, see the vendor documentation.

HP Workstation xw8200 Slot Configurations

| Slot ^a | Board Information | Description |
|---|---|---|
| PCI slot 1 (32-bit, 33 MHz, 5 V) | Not used | Do not use. This bus segment is used by the integrated 1394 and the integrated Ethernet.  <i>An on-board Ultra 320 SCSI connector panel occupies this location. The on-board SCSI is on the same bus segment as slots 6 and 7.</i> |
| PCI Express slot 2 (x16 Graphics bus) | NVIDIA Quadro FX 3400 graphics board | Processes input from the Avid Nitris Base board, handles OpenGL [®] processing, and outputs video signal to workstation monitor(s). |
| PCI slot 3 (32-bit, 33 MHz, 5 V) | Not used | Do not use. This bus segment is used by the integrated 1394 and the integrated Ethernet. |
| PCI Express slot 4 (x8 mechanically, x4 electrically) | Not used | Do not use. Currently, Avid has not qualified any boards for this slot. |
| PCI-X slot 5 (64-bit, 133 MHz, 3.3 V) | Avid Nitris Base board | Processes video capture, playback I/O, and hardware effects for the Avid Nitris DNA and routes video to the NVIDIA graphics board.  The Nitris Base board must run at 100 MHz. The board is installed into the PCI-X 133 MHz bus slot but Avid sets this PCI-X slot to runs at 100 MHz in the BIOS. |
| PCI-X slot 6 (64-bit, 100 MHz, 3.3 V) | Avid Nitris Codec board | Performs the HD compression and 10-bit formats for the Avid Nitris Base board. |
| PCI-X slot 7 (64-bit, 100 MHz, 3.3 V) | ATTO [™] optical Fibre Channel board when connected to Avid Unity [™] MediaNetwork (SD) or local storage (SD or HD) | Processes input and output to the Fibre Channel storage on Avid Unity MediaNetwork or local storage. |


- a. On a rack mount workstation, PCI slot 1 is to the left, and the PCI slot 7 is to the right when viewing the back of the workstation base unit.

HP Workstation xw8000 Slot Configuration and Connections

The back panel shown in the following figure contains an AGP slot and five PCI slots. Only four of these PCI slots are used as expansion slots because the graphics board uses the AGP slot and one PCI slot.


The back panel also contains ports for connecting the mouse, keyboard, monitors, and application key (dongle).

xw8000 Back Panel Overview

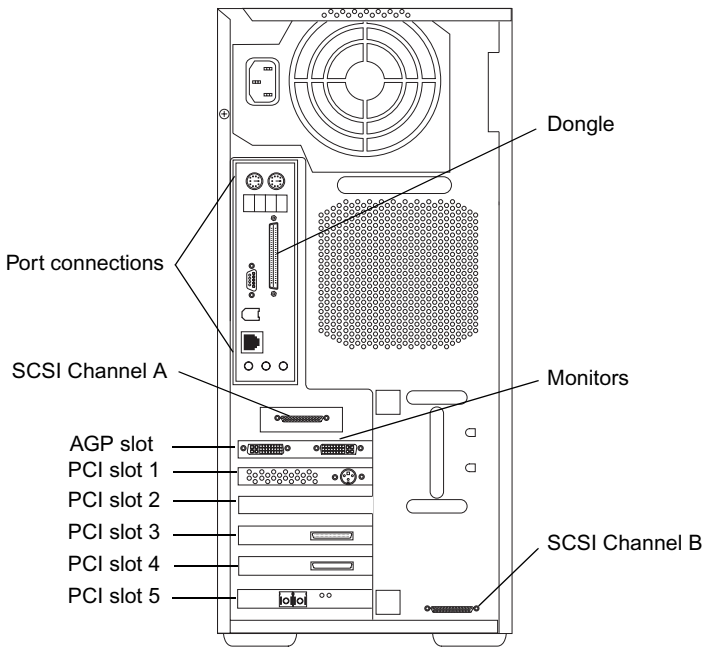

The following table lists the Avid qualified slot configuration and function of each expansion board installed in the xw8000 workstation. Expansion boards are installed in the workstation's PCI and AGP slots. For details on graphics board specifications and system configuration, see the vendor documentation.

HP Workstation xw8000 Slot Configurations


| Slot ^a | Board Information | Description |
|-------------------|---|--|
| AGP slot | ATI FireGL X2-256t MB graphics board | Processes input from the Avid Nitris Base board, handles OpenGL processing, and outputs video signal to workstation monitor(s). |
| PCI slot 1 | Empty | None (space used by ATI FireGL X2-256t). |
| PCI slot 2 | Not used | None. |
| PCI slot 3 | Avid Nitris Base board | Processes video capture, playback I/O, and hardware effects for the Avid Nitris DNA and routes video to the ATI FireGL graphics board.  The Nitris Base board must run at 100 MHz. The board is installed into the PCI-X 133 MHz bus slot but Avid sets this PCI-X slot to runs at 100 MHz in the BIOS. |
| PCI slot 4 | Avid Nitris Codec board | Performs the HD compression and 10-bit formats for the Avid Nitris Base board. |
| PCI slot 5 | ATTO optical Fibre Channel board when connected to Avid Unity MediaNetwork (SD) or local storage (SD or HD) | Processes input and output to the Fibre Channel storage on Avid Unity MediaNetwork or local storage. |

a. On a rack mount workstation, the AGP slot is to the left, and the PCI slot 5 is to the right when viewing the back of the workstation base unit.

Avid Nitris Base Board Connections

The following illustration shows the connections on the Avid Nitris Base board. For information on connecting your video and audio equipment to the Avid Nitris Base board, see [“Connecting Peripheral Devices” on page 61](#).

Avid Nitris Base Board Connections

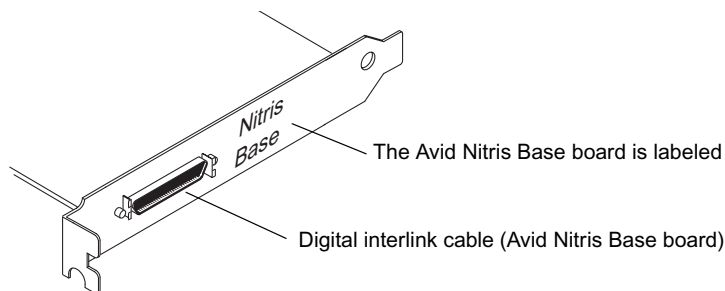

Avid Nitris Base Board Connections




There is a similar connector on the Nitris Codec board which is currently not used. Make sure you connect the digital interlink cable to the board labeled “Nitris Base.”

Port Locations

The back panel also contains ports for connecting the mouse, keyboard, and application key (dongle).

Mouse, Keyboard, and Application Key Connections

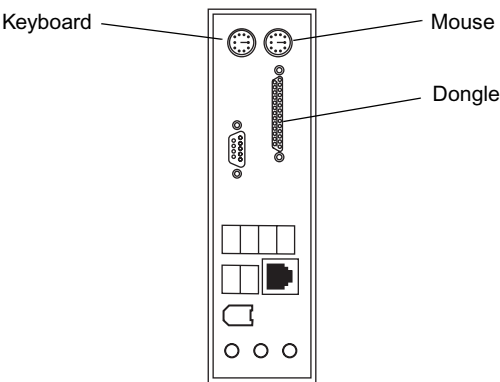

Rear SCSI Connectors

SCSI channels at the rear of the system, A and B, replace the Adaptec™ 39160 SCSI board used in previous Avid DS systems. These channels allow you to use the HD version of Avid DS Nitris with Avid MediaDock LVD Avid MediaDock Ultra series, or other Avid DS supported SCSI storage devices.




As drive size and drive speed improve, some Fibre Channel devices and LVD shuttles will be available for use, while some might be discontinued. For more product information contact Avid Sales and Product Information at 800-949-2843.

For more information on a specific expansion board, see the manufacturer's documentation.

ATTO Optical Fibre Channel Board Connector

The following figure shows the connector on the ATTO optical Fibre Channel board. This is the storage adapter included with SD versions of Avid DS Nitris that use the Avid Unity MediaNetwork or SD or HD versions of Avid DS that use local storage. For more information on the ATTO board, see the instructions that ship with Avid Unity MediaNetwork.

ATTO Fibre Channel Connection

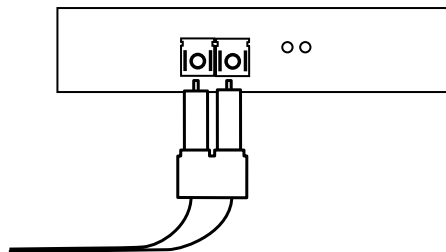

Disk Subsystem

In a standard configuration, one Integrated Drive Electronics (IDE) disk drive is installed in the base unit, and eight SCSI disk drives are installed in the Avid MediaDock LVD or 12 SCSI disk drives in a MediaDock Ultra320. The system disk drive is formatted with two partitions for storing operating system files, project files, and audio files. The Avid MediaDock LVD drives are formatted as a striped volume for video file storage.

Disk striping is a hardware capability that speeds up data I/O from disk storage. The workstation divides the data into pieces, and spreads the pieces across the disks in the striped volume. Because the workstation transfers data to multiple drives in smaller chunks than would be transferred to a single drive, the data transfer rate is accelerated.

The following table summarizes disk drive information for a standard configuration.

Disk Drive Information

| Drive | Label | Description | Contents | Format |
|-------|---------------|---|---------------------------------|------------------------|
| C | System | A partition of the primary system disk | Operating system software | NTFS |
| D | Video storage | Local SCSI or local Fibre Channel storage for SD or HD versions | Video files | NTFS |
| | | Avid Unity MediaNetwork | Workspaces | Avid Unity file system |
| F | Projects | A partition of the primary system disk | Audio and project-related files | NTFS |
| G | DVD-ROM | — | — | — |

System Inputs and Outputs

The following table describes the system inputs and outputs. For instructions on connecting peripherals and various video equipment to your workstation, see [Chapter 3](#).

System Inputs and Outputs

| Input/output | Description |
|----------------------|--|
| Video Input | HD and SD SDI via BNC connectors SD via BNC connector SD component via BNC connectors SD composite via BNC connector SD S-Video via an S-Video connector |
| Video Output | HD and SD SDI via BNC connectors SD via BNC connector HD and SD component via BNC connectors SD composite via BNC connectors SD S-Video via an S-Video connector |
| Audio Analog Input | 8 analog audio input channels with adjustable gain controls |
| Audio Analog Output | 8 analog audio output channels with adjustable gain controls |
| Audio Digital I/O | 8 AES/EBU digital input and output channels |
| Optical Digital I/O | ADAT and S/PDIF multichannel optical digital interface (ODI) |
| USB | Used to interfaces with a USB-to-MIDI converter The MIDI/game port (located on the USB-to-MIDI converter) provides MIDI control of external controllers, such as the JL Cooper MCS-3800. MIDI control requires a separately purchased cable and the proper MIDI driver. |
| Sync Input | SD sync input via BNC connector HD tri-level sync input via BNC connector |
| RS-232 Remote | DB-9 connector that connects the RS-232 to RS-422 convertor. Use the supplied cable only |
| SCSI rear connectors | 68-pin connectors for the Avid MediaDock LVD and Avid MediaDock Ultra320 storage systems |

Audio Peripherals

The Avid DS Nitris workstation supports up to eight input and output channels of audio data.

Most VTRs and audio for various video devices use balanced analog or other non-digital audio formats. For these formats, you must purchase an external A/D - D/A converter or a digital format converter. These converters have a wide range of performance characteristics, and vary by the type of formats supported and the number of I/O channels.

Audio converters that can lock to an ADAT ODI signal work best with the Mykerinos audio card included with Avid DS Nitris.

For a list of supported audio peripherals, contact your local reseller or Avid DS Customer Service.

Signal Flow

The following sections provide an overview of the signal flow during capture and playback. The Avid DS Nitris software controls the process.

Capture Mode

Capture mode lets you use Avid DS Nitris to capture video and audio from the VTR.

- The video output of the VTR goes through the Avid Nitris DNA to the Nitris Base board, then to the Nitris Codec board, and from there to the video storage array.
- The video output of the Nitris Base board goes to the graphics board and then to the workstation monitors, where it is displayed as video-in-a-window.
- The control signal from the serial port goes to the VTR to control device operation (the supplied RS-232/RS-422 convertor and cable must be connected to the workstation).
- The sync signal from the house sync goes through the Avid Nitris DNA to the Nitris Base board.

Playback Mode

Playback mode lets you use Avid DS Nitris to record video on the VTR.

- The video stored on the video storage array goes through the Nitris Codec board, the Nitris Base board, the Avid Nitris DNA, and then goes to the VTR and video monitor.
- The video output of the Avid Nitris Base board goes to the graphics board and then to the workstation monitors, where it displays as video-in-a-window. It is also sent back to the Avid Nitris DNA for a Client monitor.
- The control signal from the serial port goes to the VTR to control device operation.
- The sync signal from the house sync goes through the Avid Nitris DNA.

House Sync

Whenever you use more than one video device, you must have video synchronization. If the devices are not in sync, a monitor will show rolling, tearing, or incorrect colors in the picture whenever you transfer the video between devices.

A sync generator or house sync provides the synchronizing composite signal to all other devices (video and audio) that must lock to the main video program. This analog composite reference video signal, called “color black” or “black-burst” video, is a timing pulse that is added to a composite video signal and contains horizontal, vertical, and color synchronizing information.

Tri-level Sync

In the case of HD video devices, you need a tri-level sync. Tri-level sync could be considered synonymous to black-burst video in that it is simply the reference synchronizing information from the facility's master generator.

Each HD format needs a specific tri-level sync. You must use the proper tri-level sync to synchronize your VTR and the Nitris DNA video subsystem for all the HD formats supported by Avid DS.



To make sure the configuration you are using is properly synced, read the documentation that ships with your video subsystem.


The following is a list of the HD formats currently supported by Avid DS.

- 1080i Interlaced
 - 1080i/60.00 fields per second
 - 1080i/59.94 fields per second
 - 1080i/50.00 fields per second
- 1080Psf Progressive
 - 1080Psf/30.00 frames per second
 - 1080Psf/29.97 frames per second
 - 1080Psf/25.00 frames per second
 - 1080Psf/24.00 frames per second
 - 1080Psf/23.976 frames per second
- 720 Progressive
 - 720/59.94 frames per second
 - 720/60 frames per second

Sync Topology

When you sync analog and digital video/audio devices, it is always preferable to feed every component with a separate black-burst or tri-level sync signal in a star pattern. Avoid looping the reference signal, by terminating any unused loop out with a 75 ohm terminator.

A typical star pattern sync topology

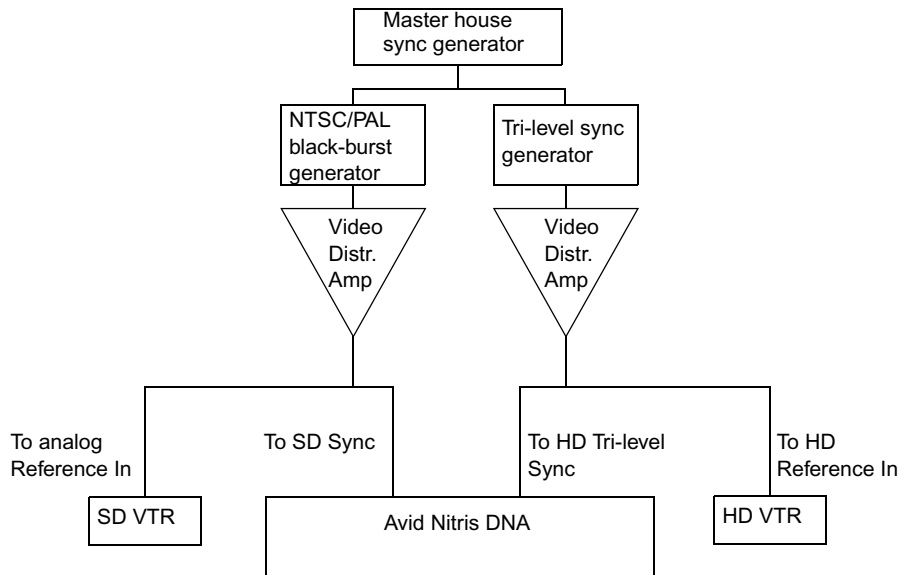

You also need to verify the following to make sure your topology is correct:

- **Distance between distribution Amplifier (DA):** If your DA feeds multiple machines that are far apart, the stability and strength of the signal it sends will be crucial.
- **Quality of the devices:** A good DA in a star pattern topology will be necessary to ensure that every device is properly referenced. A tri-level sync signal could be distributed by an analog video distribution amplifier.
- **Analog video routing switchers:** The Nitris DNA has separate inputs for the SD and HD sync, consider using an analog routing switcher to select between the various tri-level sync signals.

Installing and Removing the Avid Fan

The documentation that ships with the HP Workstation explains how to install optional equipment. However, Avid requires an extra fan in the HP Workstation for cooling the Avid board set. The following procedure describe how to install the fan Avid has added to the HP Workstation. Reverse the procedure for removing the fan.



Before you install or remove the fan, you *must* make sure the system was turned off in a proper manner, the power cord is removed from the rear of the system, and you follow the proper grounding techniques.

To install and remove the fan:

1. Lay the system on its right side.
2. Unlock the left side cover using the keys attached to the rear of the system.
3. Remove the side cover by pulling out the latch to release the cover and removing it from the system.
4. Place the fan into the two slots located at the rear of the system. Make sure that the round SCSI cable is under the higher portion of the fan.

Placing the Fan Into the System



5. Lower the other end of the fan, pushing it down and towards the rear of the system until you have a pressure fit, carefully watching for the cables on the side of the system.

Lowering Fan Into Place




6. Connect the power plug.



Avid uses one of the power plugs available for internal disks.

Plugging the Fan

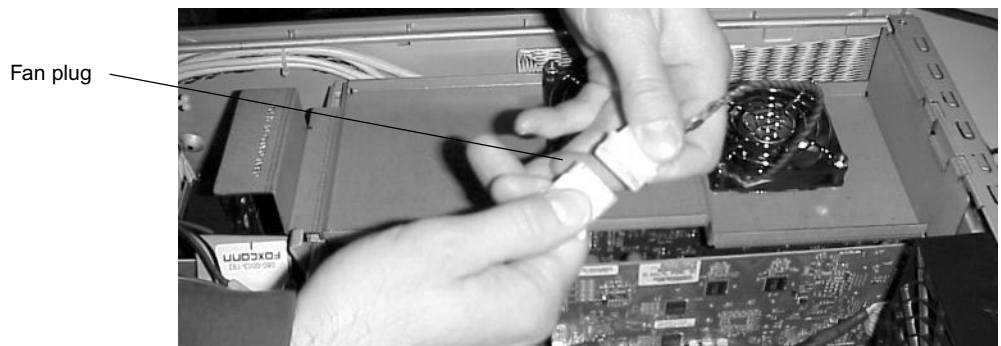

7. Reverse the procedure for removing the fan.

Chapter 3

Assembling the System

This chapter provides the instructions you need to assemble the Avid DS system. This chapter contains the following sections:

- [Before Assembling the System](#)
- [Connecting the Keyboard, Mouse, and Graphic Tablet](#)
- [Connecting the Monitors](#)
- [Connecting the Avid Nitris DNA](#)
- [Connecting the SCSI Local Storage Systems](#)
- [Connecting the Machine Control Cable](#)
- [Connecting the USB-to-MIDI Converter](#)
- [Connecting Peripheral Devices](#)
- [Connecting the Application Key \(Dongle\)](#)

Before Assembling the System

Before setting up your system, see the Release Notes to make sure that there are no changes, additions, or deletions to the procedures in this chapter.

The required expansion boards are installed and configured for Avid DS Nitris. You should not remove or modify these boards.

For detailed instructions on setting up the base unit hardware, see the setup sheet provided with the HP Workstation. For a rackmount workstation, you must install the base unit into a standard rack before connecting the hardware.

To prevent equipment damage that may be caused by static electricity, do all of the following before making any connections:

- Turn off all devices.
- Always use anti-static prevention.
- Always connect devices to a properly grounded outlet.
- Touch the metal casing of the device before handling the boards.

Avid Nitris DNA

The Avid Nitris DNA provides the high definition and standard definition input and output from your Avid DS system. The front panel of the Nitris DNA has several status LEDs, audio meters, and a power switch.




Power-on the Avid Nitris DNA after you have turned on your computer.

Front Panel

The following figure and table show and describe the Avid Nitris DNA LEDs, and power switch.

Avid Nitris DNA Front Panel

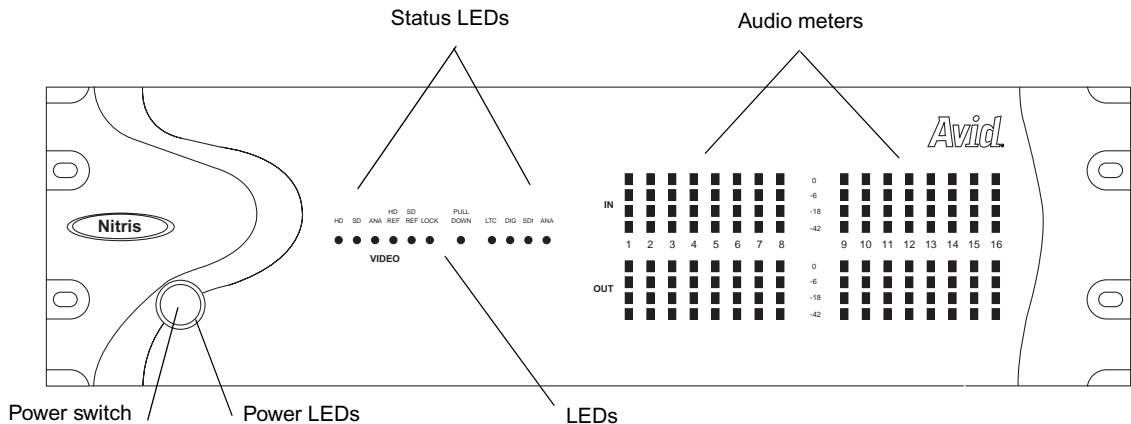

Avid Nitris DNA LEDs

| LED | Status When Lit |
|------------|--|
| VIDEO | |
| HD | The Nitris DNA is in High Definition (HD) mode (as opposed to SD). The light will be illuminated when the system is set to ingest HD source media and the signal is present from the source. |
| SD | The Nitris DNA is in Standard Definition (SD) mode. The light will be illuminated when the system is set to ingest SD source media and the signal is present from the source. |
| HD REF | Blinks when a High Definition Reference signal is connected and constantly on when the Nitris DNA is locked to the incoming Reference signal. |
| SD REF | Blinks when a Standard Definition Reference signal is connected and constantly on when the Nitris DNA is locked to the incoming Reference signal. |
| Lock | The Nitris DNA has a valid house sync input signal and is locked to it (for capture). This LED blinks if it detects a sync signal that is not valid. |
| AUDIO | |
| Pull Down | Lit when Pull Down is selected in the application. |
| LTC | Lit when LTC IN is present on the input to the Nitris DNA. |
| DIG | Lit when a digital input is selected in the application. |
| SDI | Lit when a serial digital audio interface input is selected in the application. |
| ANA | Lit when an analog input is selected in the application. |
| Power LEDs | LEDs around the power button light when the Nitris DNA is on. Yellow is displayed when no signal is detected from the Nitris Base board. Green is displayed when the Nitris Base board signal is detected. |


Rear Panel

The Nitris DNA rear panel contains the following video I/O and audio I/O boards:

- **HD Video I/O board** — Provides HD SDI I/O, HD monitor, HD component, and a HD tri-level sync connections for video equipment.

- **Eight-channel audio I/O board** — Provides two microphone inputs, eight analog I/O channels, two S/PDIF audio I/O channels, eight AES/EBU audio I/O channels, and eight channels of optical ADAT.
- **SD Video I/O board** — Provides analog and digital I/O connections for video equipment, and connects the Avid Nitris DNA to the system using the digital interlink cable. Digital interlink cable transfers video signal data between the workstation's Avid Nitris Base board and the Avid Nitris DNA. The SD Video I/O board also provides locations for syncing equipment to the Nitris DNA.

Avid Nitris DNA Rear Panel

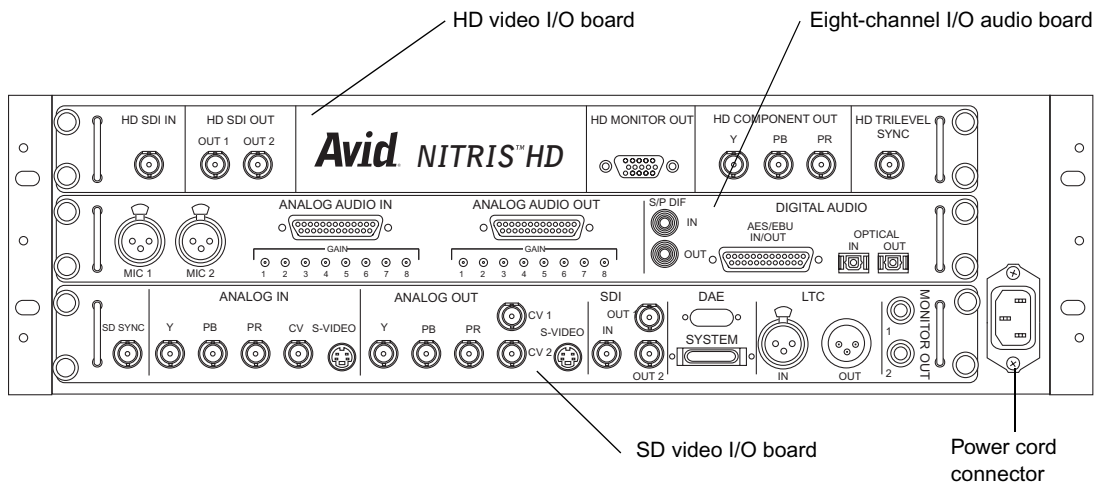

If you select a downconvert format, you can output HD playback and SD downconvert simultaneous through the Avid Nitris DNA. As a result, you can monitor SD output or create an SD master at the same time you are outputting an HD master. Some HD media formats are not compatible with SD resized outputs.

Each connector on the three Avid Nitris DNA I/O boards is described in the following sections:


[HD Video I/O Board Connectors](#)

[Eight-Channel Audio I/O Board Connectors](#)


[SD Video I/O Board Connectors](#)

HD Video I/O Board Connectors

The following figure shows the connections on the HD video I/O board. The following table describes the function of each connector. You select which inputs to use from the Capture tool when inputting. Use the Output tool to select the outputs.

 *The HD Monitor and HD Component outputs cannot be used at the same time. Select one of the two in the Output tool.*

HD Video I/O Board Connectors

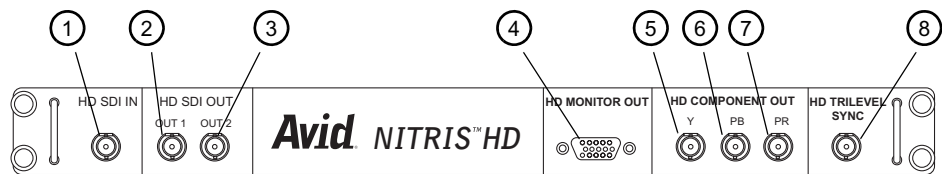


HD Video I/O Board Identifiers

| Number | Label | Function |
|--------|----------------------|---|
| 1 | HD SDI IN | High-Definition Serial Digital Interface input, BNC connector. |
| 2 | HD SDI OUT 1 | High-Definition Serial Digital Interface output number 1, BNC connector. |
| 3 | HD SDI OUT 1 | High-Definition Serial Digital Interface output number 2, BNC connector. |
| 4 | HD MONITOR OUT | High-Definition component analog RGB video signal on a 15-pin connector: compatible with multisync computer monitors. |
| 5 | Y, HD COMPONENT OUT | HD analog component video output, Y color difference signal, BNC connector; connects to analog video input of a monitor or waveform /vector. |
| 6 | PB, HD COMPONENT OUT | HD analog component video output, PB color difference signal, BNC connector; connects to analog video input of a monitor or waveform /vector. |
| 7 | PR, HD COMPONENT OUT | HD analog component video output, PR color difference signal, BNC connector; connects to analog video input of a monitor or waveform /vector. |
| 8 | HD TRILEVEL SYNC | High-Definition video reference input for tri-level sync. |

Eight-Channel Audio I/O Board Connectors

The following figure shows the connections on the eight-channel audio I/O board. The following table describes the function of each connector. You select which audio inputs to use from the Capture tool when inputting.

Eight-Channel Audio I/O Board Connectors

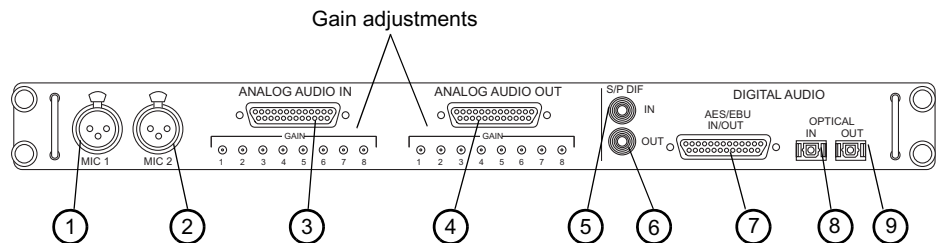


Eight-Channel Audio I/O Board Identifiers

| Number | Label | Function |
|--------|----------------|---|
| 1 | MIC 1 | Microphone (MIC) inputs, two female XLR connectors. The analog microphone connectors accept powered or 48 V phantom power microphones. The audio input and microphone are selected in the software. |
| 2 | MIC 2 | |
| 3 | ANALOG IN | Channels 1 - 8 Professional level audio input, 25-pin DSUB connector; a color coded DB25 to XLR cable is provided. |
| — | Gain | Gain controls for the 8 audio inputs. |
| 4 | ANALOG OUT | Channels 1 - 8 Professional level audio output, 25-pin DSUB connector; a color coded DB25 to XLR cable is provided. |
| — | Gain | Gain controls for the 8 audio outputs. |
| 5 | S/PDIF IN | S/PDIF digital input, white phono (RCA) jack. |
| 6 | S/PDIF OUT | S/PDIF digital output, red phono (RCA) jack. |
| 7 | AES/EBU IN/OUT | Channels 1 - 8 AES/EBU digital input and output, 25-pin DSUB-connector; a color coded DB25 to XLR cable is provided. |
| 8 | ADAT IN | 8 optical channels input. |
| 9 | ADAT OUT | 8 optical channels output. |

SD Video I/O Board Connectors

The following figure shows the connections on the SD video I/O board. The following table describes the function of each connector.

SD Video I/O Board Connectors

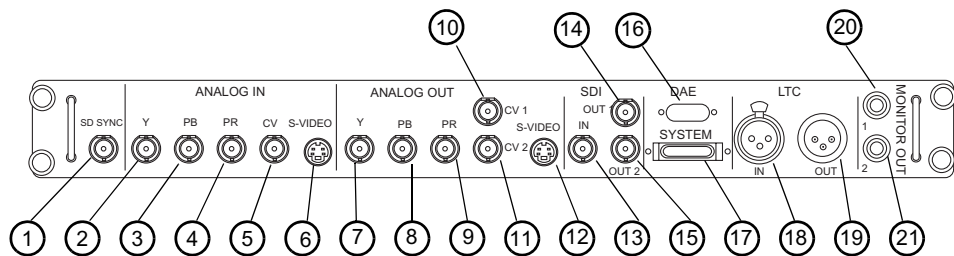

All analog video outputs are available during capture and playback to be used as a client monitor.

SD Video I/O Board Identifiers

| Number | Label | Function |
|--------|---------------------------|--|
| 1 | SD SYNC | Standard-definition video reference (REF) input for a black burst or house sync signal, BNC connector. |
| 2 | Y, ANALOG IN (component) | SD analog component video input, Y luma, BNC connector; connects to the Y video output of decks. |
| 3 | PB, ANALOG IN (component) | SD analog component video input, PB color difference signal, BNC connector; connects to the B-Y video output of decks. |
| 4 | PR, ANALOG IN (component) | SD analog component video input, PR color difference signal, BNC connector; connects to R-Y video output of decks. |
| 5 | CV, ANALOG IN (composite) | Composite video input, BNC connector. Connects to analog video output of decks. |
| 6 | S-VIDEO, ANALOG IN | S-Video input, 4-pin connector. Connects to analog video output of decks. |
| 7 | Y, ANALOG OUT (component) | SD analog component video output, Y luma, BNC connector; connects to Y video input of decks. The component analog output connectors can also be connected to a monitor or waveform/vector. |

SD Video I/O Board Identifiers (Continued)

| Number | Label | Function |
|--------|---------------------------------|--|
| 8 | PB, ANALOG OUT (component) | SD analog component video output, PB color difference signal, BNC connector; connects to B-Y video input of decks. The component analog output connectors can also be connected to a monitor or waveform/vector. |
| 9 | PR, ANALOG OUT (component) | SD analog component video output, PR color difference signal, BNC connector; connects to R-Y video input of decks. The component analog output connectors can also be connected to a monitor or waveform/vector. |
| 10 | CV 1, ANALOG OUT (composite) | Composite video output, BNC connector. Connects to analog video input of decks or monitor. |
| 11 | CV 2, ANALOG OUT (composite) | Composite video output, BNC connector. Connects to analog video input of decks or monitor. |
| 12 | S-VIDEO, ANALOG OUT | Super-video output, 4-pin connector. Connects to analog video input of decks. |
| 13 | SDI IN | Serial Digital Interface input, BNC connector. |
| 14 | SDI OUT1 | Serial Digital Interface output number 1, BNC connector. |
| 15 | SDI OUT2 | Serial Digital Interface output number 2, BNC connector. |
| 16 | DAE | Digital Audio Extraction (DAE) interface, 9-pin DSUB connector. DAE will not be supported in the initial release of the Nitris DNA. |
| 17 | SYSTEM | Audio, video, and communication I/O connector from the Avid DS system. |
| 18 | LTC IN | Longitudinal timecode input, female connector. Can be used in place of 9-pin deck control when deck control is not required. |
| 19 | LTC OUT | Longitudinal timecode output, male connector. Master clock used to stripe tapes and synchronize systems to the house master clock (SMPTE for NTSC, and EBU for PAL). |
| 20 | Monitor OUT 1 | 1/4-inch audio tip/ring/sleeve (TRS) jacks that each output one channel (left/right) of audio to speakers. The audio feeding this connection is from the incoming or outgoing audio. |
| 21 | Monitor OUT 2 | |




This TRS jack provides balanced professional level audio to your speaker system. Do not use 1/4 mono cables in this connector, your output levels might be too high.

Connecting the Keyboard, Mouse, and Graphic Tablet

The keyboard and mouse come with attached cables for connecting them to the back panel of your workstation. The Wacom graphic tablet comes with a USB cable. The following figure shows the keyboard, mouse, and Wacom tablet connections on a deskside workstation. For more information, see the Wacom documentation.

Connecting the Keyboard, Mouse, and Wacom Tablet

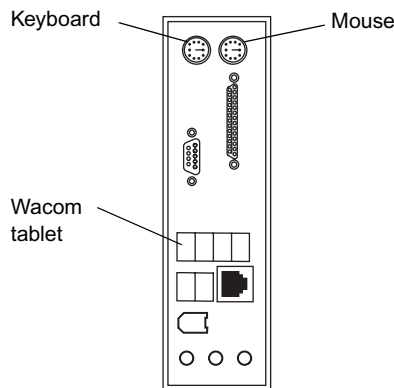

To connect the keyboard and mouse:

1. In the base unit, connect the keyboard to the top-left or bottom mini-DIN port.
2. Connect the mouse to the top-right or top mini-DIN port in the base unit.



On a rackmount workstation, the keyboard port is on the bottom when viewing the back of the workstation base unit and the mouse is to the top.



Avid does not recommend using extension cables more than 6-feet (1.83-meters) for your keyboard and mouse.

To connect the Wacom tablet:


- Connect the USB cable from the Wacom tablet to one of the USB ports on the back panel of the base unit (the tablet receives power through the USB port). If needed, the Wacom tablet can also plug into one of the front USB ports on the workstation.

Connecting the Monitors


Your workstation comes with two monitors for Avid DS Nitris. You can purchase either standard high-resolution flat-panel monitors or VGA monitors. The monitors connect to the following graphic boards:

- In the xw8200 workstation, monitors connect to the NVIDIA Quadro FX 3400 graphics board (see the following figure). The NVIDIA Quadro FX 3400 graphics board is located in the PCI Express slot 2.
- In the xw8000 workstation, monitors connect to the ATI FireGL X2-256t board (see the following figure). The ATI FireGL X2-256t board takes up two slots in the xw8000 system: the AGP slot and PCI slot 1.

NVIDIA Quadro FX 3400 Graphics Board in the xw8200 Workstation

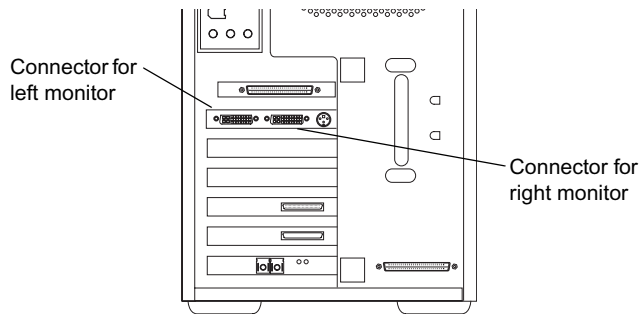

ATI FireGL X2-256t Board in the xw8000 Workstation

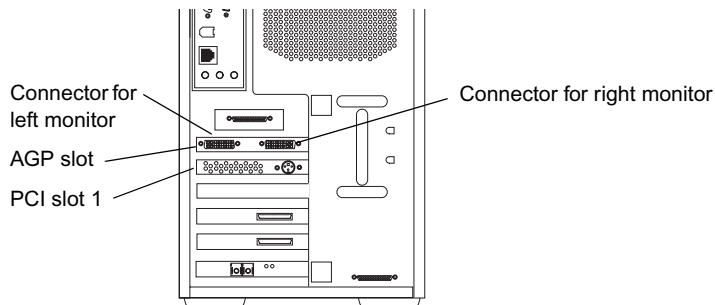

On a rackmount workstation, the graphic boards are to the left when viewing the back of the workstation base unit.

Each monitor comes with a video cable and a power cord. Depending upon the monitor, you might receive a VGA-to-DVI adapter. Avid recommends that you use the DVI connectors on the monitor if available. For more information regarding the graphic boards and monitors, see the documentation provided by the manufacturer.

The driver for the graphic board should be installed on your system, but is also located on the Avid DS Drivers CD-ROM. Unique video property settings and system BIOS are used in your Avid DS Nitris system. For more information consult, your Avid representative.

To connect the monitors:

1. Verify that the power switches on the monitor and the base unit are in the Off position, and then connect these devices to a power source.
2. Attach one end of the cable to the monitor. Use adapter if needed.
3. Attach the other end of the cable to the appropriate DVI connector as shown in [“NVIDIA Quadro FX 3400 Graphics Board in the xw8200 Workstation”](#) and [“ATI FireGL X2-256t Board in the xw8000 Workstation”](#) on page 50. Use adapter if needed.

Connecting the Avid Nitris DNA


To connect the Avid Nitris DNA to the workstation (see the following figure):

1. Make sure that the power switch on the Nitris DNA is Off.
2. Attach the power cord to the power connector at the back of the Nitris DNA and plug it into a power outlet.
3. Plug one end of the digital interlink cable into the SYSTEM connector at the back of the Nitris DNA.
4. Plug the other end of the digital interlink cable into the digital interlink connector on the Avid Nitris Base board.
5. Make sure both ends of the cable are secure.



Power-on the Avid Nitris DNA after you have turned on your computer.

Connecting the Avid Nitris DNA

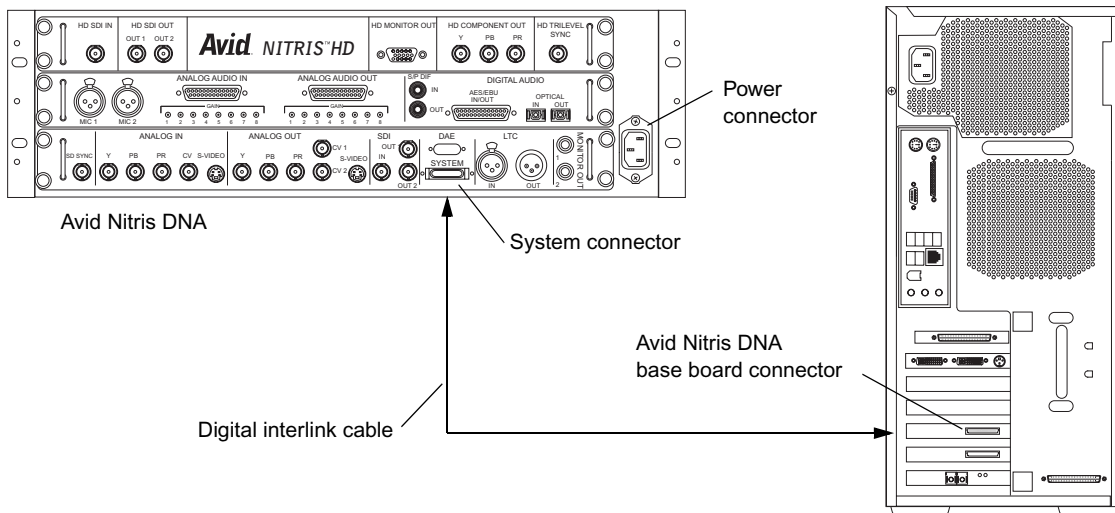


Connecting the Application Key (Dongle)

The software application key (dongle) provides copy protection for the software that is installed on the parallel port of your workstation (see the following figure). Avid DS Nitris will not start unless the dongle identification number matches the information in the license file on your workstation's hard drive.

The parallel port dongle does not require batteries because it receives power from the system's parallel port. Before you attach the dongle, verify that the parallel port is active.

Parallel Port Location

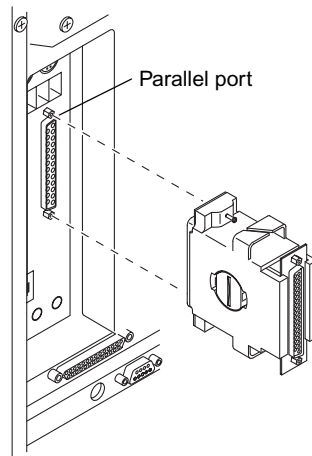

Your workstation is delivered with a license file already on the hard drive. This license file was used for testing before shipment. Your Avid DS Nitris reseller will provide a valid license file for your dongle. For more information, see the *Avid DS Installation & Administration Guide*.

To install the application key (dongle):

1. Attach the dongle to the parallel (LPT1) port on the back of the workstation.
2. Start the workstation and log in as an **Administrator**.
3. Right-click My Computer and select **Device Manager**.

4. Select **Ports (COM & LPT)** and select **ECP Printer Port (LPT1)**.
5. Right-click in ECP Printer Port (LPT1) and select **Properties**.
6. Click the General tab and verify that the Device Status says “This device is working properly.” If not, go to step 7.
7. Close the dialog box, right-click ECP Printer Port (LPT1), and select **Enable**.

Connecting the SCSI Local Storage Systems

Avid DS supports two standalone, local SCSI storage systems:


- Avid MediaDock LVD
- Avid MediaDock Ultra320

Both of these storage systems connect to the two SCSI channels at the rear of the workstation (see the following figure) and must be striped to provide the needed throughput. For striping information, see the *Avid DS Installation & Administration Guide*.



Avid typically supports newer drives as they become available. For the latest list of supported drives, see your Avid DS sales representative.

SCSI Connections at the Rear of the System

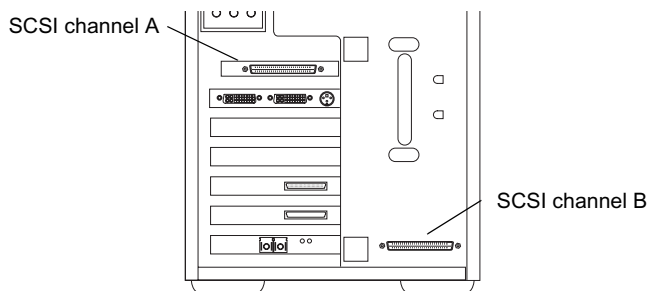

The connections at the rear of the workstation are HD 68-pin connectors. If you are going to use SCSI devices for standalone storage, you must order the cables separately when you order your Avid DS system.

The maximum total length of the external SCSI cables must not exceed 66-feet (20 meters). For example, if you are using two MediaDock enclosures (one enclosure on each SCSI channel) you could use a 33-foot (10-meter) SCSI cable for each SCSI channel.

Avid MediaDock Ultra320

The Avid MediaDock Ultra320 enclosure has 12 slots for the shuttle drives. The Avid MediaDock Ultra320 can be configured in either a single-bus or a dual-bus configurations. The Avid DS configuration supports a minimum of 8 SCSI drives in the Avid MediaDock Ultra320. At this time Avid DS supports the following two configurations of the Avid MediaDock Ultra320:

- **Single enclosure**—using Avid MediaDock Ultra320 enclosure in the dual-bus configuration. The dual-bus configuration is half the drives attached to SCSI channel A and the other half connected to SCSI channel B.

For example, six drives are connected to SCSI bus channel A and the remaining six drives are connected to SCSI bus channel B. In this configuration, you can have a maximum of 12 drives, 6 each on each SCSI bus.

- **Dual enclosures**—one Avid MediaDock Ultra320 enclosure attached to each SCSI channel.



The Dual Bus LED is Off when the MediaDock Ultra320 is in single-bus mode.


The Avid MediaDock Ultra320 storage enclosure is factory configured as a single-bus (12-drive) enclosure. In single-bus mode, you can connect your SCSI cable to either SCSI port on the MediaDock Ultra320 enclosure. The MediaDock Ultra320 is self-terminated for both single- and dual-bus configurations and does not need to be terminated externally.



For installation procedures and instructions on switching between single and dual modes, see the documentation that ships with the Avid MediaDock Ultra320.

For best performance with your Avid DS Nitris, Avid recommends that you use two Avid MediaDock Ultra320 enclosures in single-bus mode. Create a two-way stripe across both SCSI bus channels using 24 SCSI drives (12 in each enclosure). For striping information see the *Avid DS Installation & Administration Guide*.

Recommended Storage Configuration

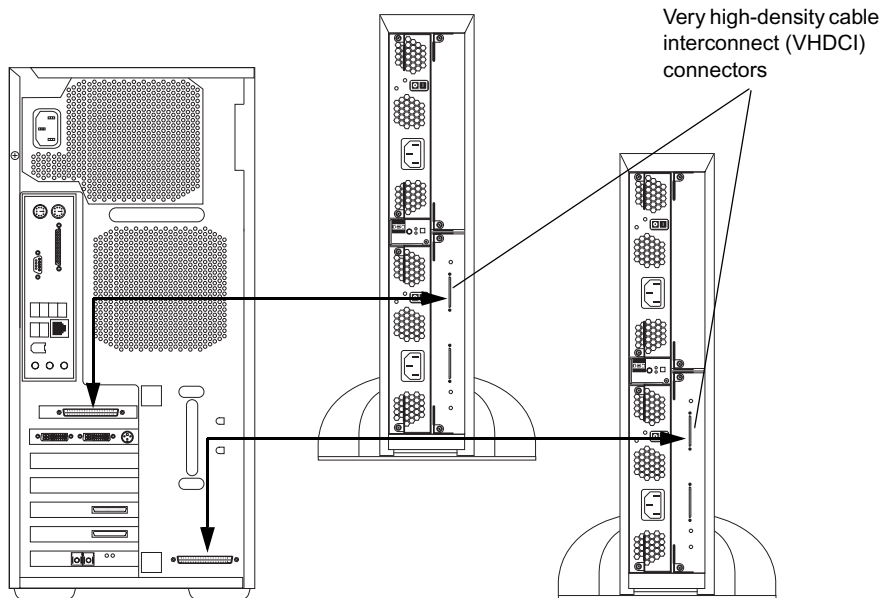

You can move striped drives on Windows 2000 and Windows XP systems from one Avid editing system to another by using the Disk Management tool. For information on moving striped drives, see your Windows documentation, or Disk Management Help.

Avid MediaDock LVD

The Avid MediaDock LVD has eight slots for LVD shuttle drives. You can use them in either single-bus or dual-bus configurations. The number of MediaDock LVD enclosures you need depends upon how the devices are configured. Avid DS only supports two configurations for the Avid MediaDock LVD.

- **Single MediaDock LVD** — For a single MediaDock configuration, the Avid MediaDock LVD is used in a dual-bus configuration. In this configuration, the slots are shared between bus A and bus B — for example, the four top slots on SCSI bus channel A and the four bottom slots on SCSI bus channel B. In this configuration you can have a maximum of eight drives, four each on each SCSI bus.
- **Dual MediaDock LVD** — If you need extra storage, you can connect two Avid MediaDock LVD enclosures to your Avid DS Nitris workstation. For the two-enclosure configuration, each Avid MediaDock is in a single bus configuration. In this configuration, all eight slots are on one bus in each Avid MediaDock and each MediaDock is connected to a different SCSI channel. In this configuration, you can use a maximum of 16 drives, 8 in each MediaDock located on each SCSI bus.

Avid recommends that you stripe the SCSI drives across both SCSI bus channels. For striping information, see the *Avid DS Installation & Administration Guide*.

For complete installation instructions, see the documentation that ships with the Avid MediaDock LVD.



Do not use the Avid MediaDock LVD Manager software that comes with the MediaDock. This utility is not supported on the Windows XP operating system at the present time and might cause problems with other applications.



Make sure that you do *not* terminate the I/O modules with SCSI terminators. The I/O and ESM modules have internal termination.

At this time, the Avid MediaDock LVD supports 36-GB, 73-GB, and 146-GB drives. You cannot mix drives within an Avid MediaDock LVD enclosure.




Avid typically supports newer drives as they become available. For the latest list of supported drives, see your Avid DS sales representative.

Fibre Channel Local Storage

Avid DS supports the MEDIArray II Fibre Channel storage system (MEDIArray II) for use with HD or SD local storage. The MEDIArray II connects to an optional ATTO 3300 optical Fibre Channel board located in PCI slot 5 of the workstation.

ATTO 3300 Fibre Channel Board Slot Location

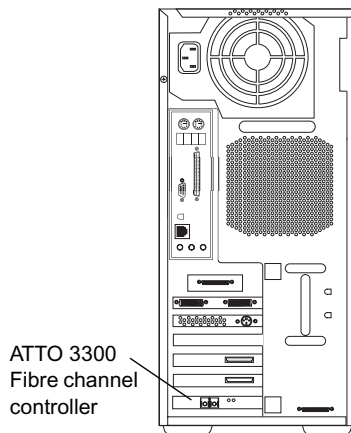

The MEDIArray II holds 14 Fibre Channel drives in slot 0 to slot 13. Avid supports a minimum of three configurations of the MEDIArray II:

- **Single enclosure** — using 73-GB, 146-GB, 300GB drives (you can not mix different drive sizes within the same enclosure)
- **Dual enclosure** — using 146-GB drives only
- **Six enclosure** — using 146-GB drives only



The Fibre Channel drives are designed specifically for the MEDIArray II enclosure and are not interchangeable with any other enclosure.

For complete installation instructions, see the documentation that ships with the MEDIArray II.



Avid typically supports newer drives as they become available. For the latest list of supported storage drives and enclosure, see your Avid DS sales representative.

Avid Unity MediaNetwork

Avid Unity MediaNetwork is the facility-class media network for content creators that lets you share a single storage between multiple workstations. You cannot use Avid Unity MediaNetwork and local Fibre Channel storage in the same system, because Avid Unity MediaNetwork uses the same optional ATTO 3300 fibre channel board installed in your Avid DS Nitris workstation in PCI slot 5 to connect to MediaNetwork (see [“ATTO 3300 Fibre Channel Board Slot Location”](#) on page 58).

Set up and installation instructions for the Avid Unity MediaNetwork ship with the Avid Unity MediaNetwork hardware. A specific driver for the Fibre Channel board might be needed for Avid Unity MediaNetwork. Make sure you read all of the instructions that ship with the equipment. For information on configuring the Avid DS software for use with the Avid Unity MediaNetwork, see the *Avid DS Installation & Administration Guide* and your Avid Unity documentation.

Connecting the Machine Control Cable

A machine control cable kit is included with the system. It includes the dataMate® DM7015 or Rosetta Stone adapter (see the following figure), a 3-foot (.92-meter) RS-232 cable, and a 10-foot (3.05-meter) RS-422 cable. The adapter converts an RS-232 signal to an RS-422 signal to control a VTR from your Avid DS Nitris workstation. The 10-foot cable is a 9-pin male-to-male data cable. The 3-foot cable is a 9-pin male-to-female data cable.

The adapters include two diagnostic LEDs (power and data). The power LED glows steadily when the adapter is receiving adequate power through the serial port. The data LED flashes whenever data is being transmitted or received. This helps you confirm that the serial port is active.

dataMate Adapter



To assemble the machine control cable

1. Attach the RS-232 cable end of the adapter to the RS-232 connector on the PC.
2. Attach the RS-422 cable end of the adapter to the RS-422 connector on the VTR.



The adapter label shows the proper orientation.

Connecting the USB-to-MIDI Converter

If you are using a JL Cooper controller in an HP Workstation you must install a USB-to-MIDI converter (see the following figure). The MIDISPORT 2x2 by M-AUDIO has been tested with the Avid DS Nitris system. You need a USB cable that connects to a USB port on the Avid DS Nitris system. Only connect the USB-to-MIDI converter if you are going to use it.



Before you use the USB-to-MIDI converter, you must install the latest revision of the driver. Go to www.midiman.net and install the latest revision for the MIDISPORT 2x2.

USB-to-MIDI Converter



To connect the USB-to-MIDI converter to a port on the system

1. Locate the MIDI converter USB cable.
2. Connect the device connector of the USB cable to the device connector at the rear of the USB-to-MIDI converter.
3. Connect the USB connector of the USB cable to a USB port at the rear of the PC.
4. Press In the USB/MIDI Thru button, at the front of the USB-to-MIDI converter, to allow the device to act as a USB-to-MIDI converter.

Connecting Peripheral Devices

Peripheral devices, such as VTRs and DATs, connected to your workstation allow you to capture and output video/audio material. You can control this equipment remotely with Avid DS Nitris.

Video Connections

You can connect HD VTRs and video monitors to your workstation. Although Avid recommends you use a house sync, Avid DS Nitris can capture and output by using an internal sync signal generated by the Avid Nitris DNA.

The following procedures and illustrations explain each of these variations. For more information, see the documentation that comes with your peripheral devices.

To connect video devices (see the following figure):


1. Connect the HD In on the Avid Nitris DNA to the HD Out on the VTR.
2. Connect one of the HD Outs, on the Avid Nitris DNA to the HD In on the VTR.
3. Connect the other HD Out on the Avid Nitris DNA to the HD In on the video monitor.
4. Set the VTR transport switch to Remote.
5. Plug the RS-232 end of your machine control cable into the serial port on your workstation.
6. Plug the other end of the cable into the REMOTE IN port on the VTR.



You should not substitute any other cable for the machine control cable. The supplied machine control cable is an RS-232 to RS-422 converter.

7. Plug one end of a BNC sync cable into the Avid Nitris DNA's SD sync or HD tri-level input and the other into the house sync.

Connecting Video Devices

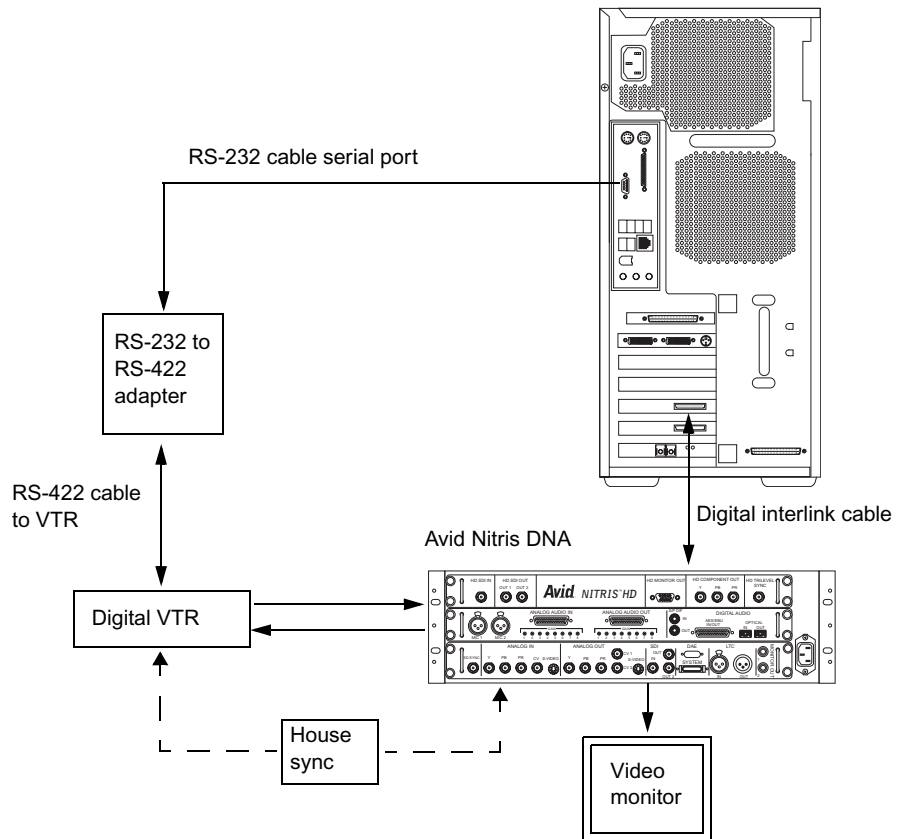

Qualified VGA Outputs

When using an RGB analog signal with a VGA monitor use a 60 Hz vertical refresh rate. You might need to adjust your horizontal and vertical display size on some monitors, and with some format combinations to view the entire picture.

The following are supported formats for Avid DS Nitris using standard VGA monitors:

- 1080I/29.97
- 1080I/30
- 1080P/29.97 (transmitted as 1080PsF/29.97)
- 1080I/25 (marginal on some VGA monitors, see the following note)



A 50 Hz. vertical rate is the lower limit on some monitors, consult your VGA monitor specification for compliance with 50 Hz vertical refresh.

- 1080P/25 (marginal - PsF)
- 720P/59.94
- 720P/60

You can also use the 15-pin D-sub VGA connector with a BNC adapter cable in Y, Pb, Pr output mode for an extra analog color difference output in addition to the primary on board Y, Pb, Pr BNC outputs.

Audio Connections

Avid provides three audio cable harnesses with the Avid Nitris DNA. Each cable is color coded and labeled for Avid Nitris DNA connections. The cables are identified as follow:

- Line In Balanced (blue)
- Line Out Balanced (red)
- AES/EBU I/O (yellow)




Pin-outs for these three audio cable harnesses are provide on the Avid DS Nitris Drivers CD-ROM and the Avid DS Support Center.

Each cable is similar in appearance using a DB-25 connector on one end, and eight industry-standard XLR audio connectors on the other end.

Audio Input and Output Cable

Avid audio I/O cables provided with the Nitris DNA

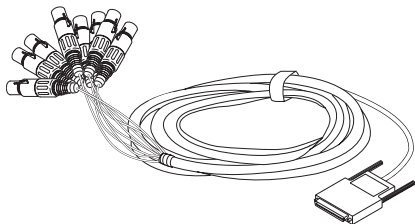


The connections between the Nitris DNA and VTR vary depending on the type of audio equipment and VTR you have. The following figure identifies the connections for your audio equipment. See [“Eight-Channel Audio I/O Board Connectors”](#) on page 46 for exact connector locations.



Two microphone inputs are also provided on the Eight-Channel Audio I/O board.

Audio Input and Output Connections

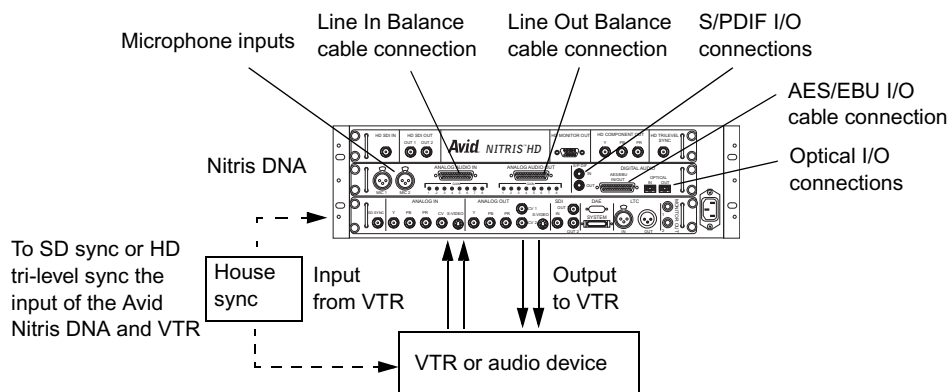


To connect your audio equipment:

1. Make sure that the power switch on the Nitris DNA is Off.
2. Connect the audio output ports on the Nitris DNA to the input ports on the VTR or audio device.
3. Connect the audio input ports on the Nitris DNA to the output ports on the VTR or audio device.

The Nitris DNA provides two balanced ¼-inch audio TRS jacks for monitoring your audio. The Monitor Out jacks are on the SD Video I/O board. When you play a sequence, the audio tracks are mixed down to stereo when heard through the monitor speakers (see the following figure).



These TRS jacks provide balanced professional level audio to your speaker system. Do not use 1/4 mono cables in this connector, your output levels might be too high.

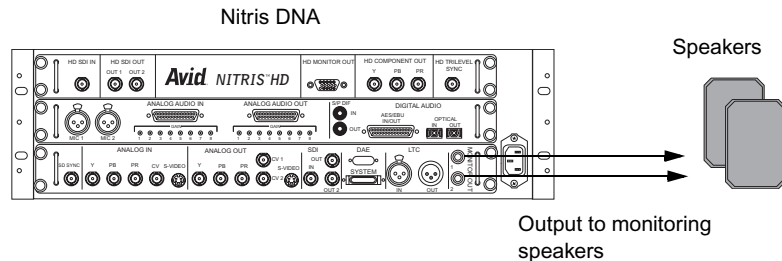Audio Monitoring Connection

Chapter 4

Rack Mounting the Avid Nitris DNA Enclosure

This section provides the information for mounting the Avid Nitris DNA in a 19-inch (483-mm) National Electrical Manufacturers Association (NEMA) or Electronics Industries Association (EIA) rack. Avid recommends that you mount your Avid Nitris DNA in a rack before you connect any cables.



If you need to rack mount the HP workstation, a rack-mount kit is available from HP. Installation instructions are included with the kit. The HP Workstation system requires 5 rack units.

This section contains the following sections:

- [Equipment Environmental and Safety Guidelines](#)
- [Installing the Avid Nitris DNA in a Rack](#)

Equipment Environmental and Safety Guidelines

When you install the Avid Nitris DNA in a rack, you must take the following precautions:

- **Elevated Operating Ambient Temperature** — When the Avid Nitris DNA is installed in a closed or multiunit rack assembly, the operating ambient temperature of the rack environment might be greater than the room ambient temperature. Therefore, consider installing the equipment compatible with the manufacturer's maximum ambient temperature of 104°F (40°C).
- **Reduced Airflow** — Do not compromise the amount of airflow required for safe operation of the equipment.

- **Mechanical Loading** — Avoid a hazardous condition due to an uneven mechanical loading.
- **Circuit Overloading** — Consider connecting the equipment to the supply circuit and the effect that overloading of circuits might have on overcurrent protection and supply wiring. Use appropriate equipment nameplate ratings.
- **Reliable Earthing** — Maintain reliable earthing of rack-mount equipment. Give particular attention to supply connections other than direct connections to the branch circuit (for example, the use of power strips).

Installing the Avid Nitris DNA in a Rack

The Avid Nitris DNA is designed for 19-inch (483-mm) rack enclosures and requires three EIA rack units (3U), or 5 ¼ inches (133.4 mm) of rack space. The Avid Nitris DNA provides rack nuts for those rack enclosures that do not have threaded holes. Rack-nut clips position the rack nuts at the holes of the rack and are used to secure the rack components in place.




To ensure the stability of the rack enclosure, start from the bottom when you install the rack components in the rack enclosure.

Attaching the Rack Nuts to the Rack

Install the rack nuts where the Avid Nitris DNA front panel will secure to the rack enclosure.


To attach the rack nuts to the rack enclosure:

1. Select the lowest position in the rack where you can mount the Avid Nitris DNA. Position the support rails so the bottom of each rail is at the baseline of a U-alignment position.

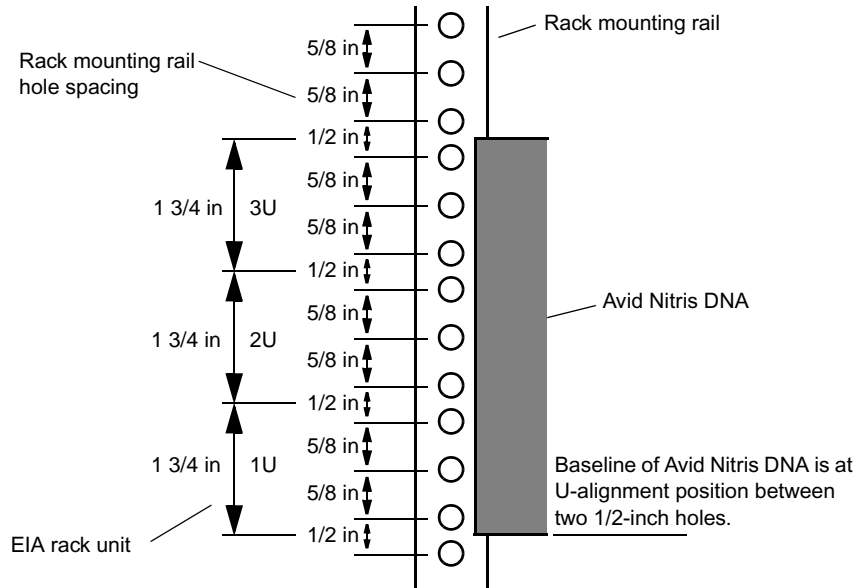Positioning the Avid Nitris DNA

2. From the inside of the enclosure rail, slide the rack-nut clip over the hole you want to use (see the following figure). If your rack enclosure has threaded holes, continue with step 4.
3. Attach a rack-nut clip for each front and rear hole in the support rails. Each front support rail needs 3 rack-nut clips.

Attaching Rack Nuts onto the Rack Enclosure

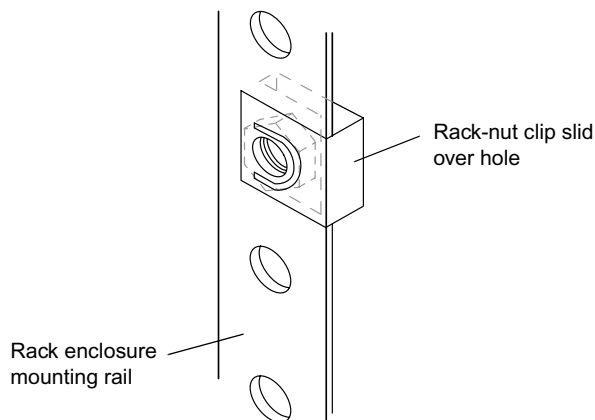

Securing the Avid Nitris DNA in a Rack

The Avid Nitris DNA is secured in the front mounting rails of the rack with four rackmount screws. If your rack has threaded holes, you might have your own rack screws. If your rack does not have threaded holes, install the rack nuts included with the Avid Nitris DNA (see [“Attaching the Rack Nuts to the Rack” on page 68](#)).




You should have someone helping you to lift the Avid Nitris DNA enclosure.

To secure the Avid Nitris DNA into the rack.

1. From the front of the rack, position the Avid Nitris DNA so that it is flush against the front mounting rails.

Installing an Avid Nitris DNA

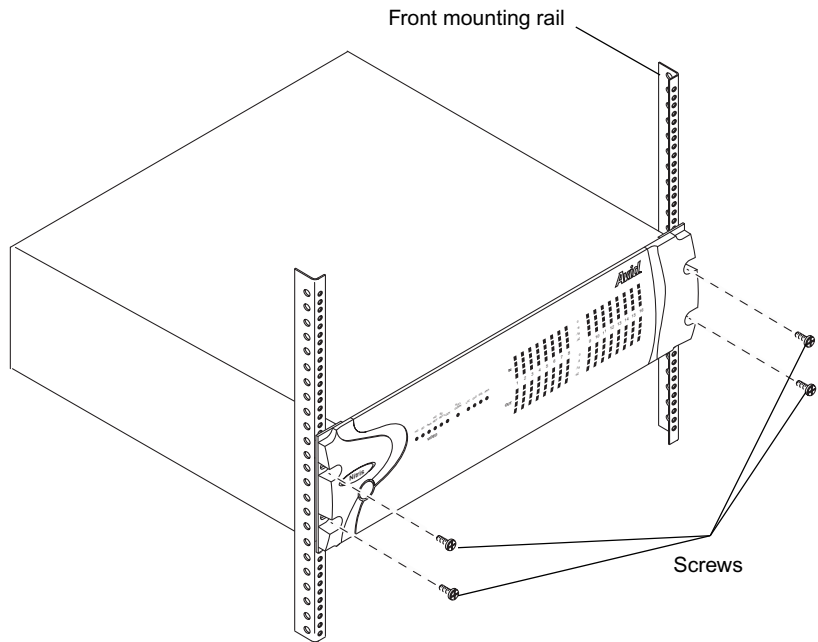

2. Align the holes in the Avid Nitris DNA with the holes in the front mounting rail. From the front of the rack enclosure, insert the screws through the Avid Nitris DNA and front mounting rail, and tighten.

Appendix A

Regulatory and Safety Notices

Warnings and Cautions



Never install equipment if it appears damaged.



Disconnect the power cord before servicing unit.



Only perform the services explicitly described in this document. For services or procedures not outlined in this document, speak with authorized Avid service personnel.



“CLASS 1 LED PRODUCT”



Follow all warnings and cautions in the procedures.



Operate the device within its marked electrical ratings and product usage instructions.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canadian ICES-003

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union Notice



Declaration of Conformity (According to ISO/IEC Guide 22 and EN 45014)

Application of Council Directives: 73/23/EEC, 89/336/EEC.

Standards to which Conformity is Declared: EN60950:1999 Third Edition
CISPR 22:1997 / EN55022:1994 + A1:1995 + A2:1997
Class A
EN55024:1998/EN61000 — 3-2, 4-2, 4-3, 4-4, 4-5, 4-6, 4-11

Manufacturer's Name: Avid Technology, Inc.
1925 Andover Street
Tewksbury, MA 01876, USA

European Contact: Nearest Avid Sales and Service Office or
Avid Technology International B.V.
Sandyford Business Center
Unit 3,
Dublin 18, Ireland

Type of Equipment: Information Technology Equipment

Product Name: Products for the Windows NT, Windows 2000, or
Windows XP Operating System: Avid Adrenaline DNA,
Avid DS Nitris DNA, Avid Equinox Break-Out-Box,
Avid|DS, Avid Xpress, Avid Xpress DV, Film Composer,
Media Composer, MediaDock, MediaDock 2+,
MediaDrive, MediaRAID, MEDIArray, MEDIArray Drive,
MEDIArray II, MEDIArray II Drive, Meridien I/O box,
NewsCutter, NewsCutter DV, NewsCutter XP,
Pro Tools AOption|V10, Symphony

Products for the Mac OS X Operating System: Avid
Adrenaline DNA, Avid Xpress, Avid Xpress DV,
Film Composer, Media Composer, MediaDock,
MediaDock 2+, MediaDrive, MediaRAID, MEDIArray,
MEDIArray Drive, MEDIArray II, MEDIArray II Drive,
Meridien I/O box, Pro Tools AOption|V10, Symphony

Products for the UNIX Operating System: AirPlay,
AirSPACE, AirSpeed, VideoSPACE

Products for MediaNetwork and Workgroups:
Avid ProEncode, Avid Unity MediaManager, Avid Unity
MediaNetwork (includes File Manager), Avid Unity
TransferManager, LANserver, LANserver EX,
MEDIArray, MEDIArray Drive, MEDIArray II,
MEDIArray II Drive, MEDIArray ZX, MEDIArray ZX
Drive, Nearcache, PortServer, Vixel switches (8100, 7100,
7200, 9100, 9200), Xdeck

Base Model Numbers: None

Product Options: All

Year of Manufacture: 2004

(1) Products for the Windows NT, Windows 2000, or Windows XP Operating System:
products were tested in a typical Avid Adrenaline DNA, Avid DS Nitris DNA,
Avid Equinox Break-Out-Box, Avid|DS, Avid Xpress, Avid Xpress DV,
Film Composer, Media Composer, MediaDock, MediaDock 2+, MediaDrive,

MediaRAID, MEDIArray, MEDIArray Drive, MEDIArray II, MEDIArray II Drive, Meridien I/O box, NewsCutter, NewsCutter DV, NewsCutter XP, Pro Tools AVoption|V10, or Symphony configuration.

(2) Products for the Mac OS X Operating System: products were tested in a typical Avid Adrenaline DNA, Avid Xpress, Avid Xpress DV, Film Composer, Media Composer, MediaDock, MediaDock 2+, MediaDrive, MediaRAID, MEDIArray, MEDIArray Drive, MEDIArray II, MEDIArray II Drive, Meridien I/O box, Pro Tools AVoption|V10, or Symphony configuration.

(3) Products for the UNIX Operating System: products were tested in an AirPlay, AirSpeed, or VideoSPACE configuration.

(4) Products for MediaNetwork and Workgroups: products were tested in a typical Avid ProEncode, Avid Unity MediaManager, Avid Unity MediaNetwork (includes File Manager), Avid Unity TransferManager, LANserver, LANserver EX, MEDIArray, MEDIArray Drive, MEDIArray II, MEDIArray II Drive, MEDIArray ZX, MEDIArray ZX Drive, Neararchive, PortServer, or Xdeck configuration.

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.

George R. Smith, Director of Hardware Engineering

Australia and New Zealand EMC Regulations



N1709

John Kells, Australian Operations Manager
Avid Technology (Australia)
Unit B
5 Skyline Place
French Forest NSW 2086
Australia
Phone: 61-2-8977-4800

Taiwan EMC Regulations

Taiwan EMC Regulations BSMI Class A EMC Warning

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Index

A

AES/EBU
 connection [44](#)
 analog connectors [48](#)
 application key (dongle)
 attaching [53](#)
 ATI FireGL board with HP system [28](#)
 attaching application key [53](#)
 ATTO board connections [31](#)
 audio
 connections [63](#)
 LEDs [43](#)
 Australia EMC regulations [76](#)
 Avid Nitris DNA
 base board connections [29](#)
 connecting [52](#), [52](#)
 front panel [42](#), [42](#)
 installing in rack [71](#)
 PCI [29](#)
 rear panel [43](#)

B

back panel, workstation [25](#)
 board
 ATTO board connections [31](#)
 audio I/O board connectors [46](#)
 Avid Nitris board connections [29](#)
 eight-channel audio I/O [44](#)
 HD video I/O [43](#)
 HD video I/O connectors [45](#)
 SD video I/O [44](#)

SD video I/O connectors [47](#)
 signal flow, capture/playback [34](#)
 xw8000 workstation [28](#)
 xw8200 workstation [26](#)

C

cables [52](#)
 machine control [59](#)
 Canadian
 interference causing equipment regulations [74](#)
 capture, signal flow [34](#)
 computer monitors, connecting [50](#)
 connecting hardware [49](#)
 audio devices [63](#)
 Avid Nitris DNA [52](#)
 computer monitors [50](#)
 keyboard [49](#)
 monitors [50](#)
 mouse [49](#)
 peripheral devices [61](#)
 tablet [49](#)
 video devices [61](#)
 WACOM tablet [49](#)
 connector
 analog [48](#)
 ATTO [31](#)
 audio I/O [46](#)
 HD video I/O [45](#)
 LTC [48](#)
 SD video I/O [47](#)
 SDI [48](#)

- S-video [48](#)
- sync [47](#)
- contents, Avid DS system
 - documentation [17](#)
 - hardware [16](#)
 - package contents [16](#)
 - software [17](#)

D

- devices
 - audio, connecting [63](#)
 - peripheral, connecting [61](#)
- dimensions
 - hardware [22](#)
- documentation [17](#)
 - ordering [13](#)
- dongle (application key)
 - attaching [53](#)

E

- EIA rack units [68](#)
- eight-channel audio I/O board
 - connectors [46](#)
 - identifying [43](#)
- electrical requirements [19](#)
 - specifications [20](#)
- environmental requirements [19](#)
- European Union notice [74](#)

F

- fan, removing and installing [38](#)
- FCC notice [73](#)
- Fibre Channel local storage [58](#)

G

- graphic tablet, connecting [49](#)
- graphics board [50](#), [50](#)

H

- hardware [16](#)

- dimensions [22](#)
- specifications [22](#)
- hardware, connecting [49](#)
 - computer monitors [50](#)
 - keyboard [49](#)
 - monitors [50](#)
 - mouse [49](#)
 - tablet [49](#)
 - Wacom tablet [49](#)
- HD tri-level sync [43](#), [45](#)
 - See also* sync
- HD video I/O board [43](#), [45](#)
- house sync [23](#)
- HP xw8000 system [28](#)
- HP xw8200 system [26](#)

I

- input and outputs, system [33](#)
- installing
 - Avid Nitris DNA in a rack [68](#)
 - fan [38](#)

K

- key, software protection [53](#)
- keyboard
 - connecting [49](#)

L

- LEDs [42](#)
- license
 - file [53](#)
- LTC connector [48](#)

M

- machine control cable [59](#)
- MediaDock LVD
 - bus [56](#)
 - connection [54](#)
 - drives [32](#)

MediaDock Ultra320
 connection [54](#)
 setup [55](#)
 MediaNetwork [59](#)
 MEDIAArray II [58](#)
 Monitor Out speakers [65](#)
 monitors, connecting [50](#)
 mouse, connecting [49](#)

N

New Zealand EMC regulations [76](#)
 NVIDIA board with HP system [26](#)

O

optical ADAT [44](#)
 output
 simultaneously [44](#)
 outputs and inputs, system [33](#)

P

package contents
 documentation [17](#)
 hardware [16](#)
 software [17](#)
 peripherals devices [61](#)
 planning, site [19–22](#)
 electrical requirements [19](#)
 environmental requirements [19](#)
 space requirements [21](#)
 playback
 signal flow [35](#)
 port locations [30](#)
 power switch [42](#)

R

rack-mount
 installation [68](#)
 positioning [69](#)
 rack nuts [68](#)
 securing the Avid Nitris DNA in [70](#)

Regulatory information [73](#)
 removing
 fan [38](#)
 removing the fan [38](#)
 requirements [19–22](#)
 electrical [19](#)
 environmental [19](#)
 space [21](#)

S

Safety information [73](#)
 SCSI storage systems [54](#)
 SD video I/O board [47](#)
 SDI connector [48](#)
 signal flow [34](#)
 capture [34](#)
 playback [35](#)
 simultaneous output [44](#)
 site planning requirements [19–22](#)
 electrical [19](#)
 environmental [19](#)
 space [21](#)
 Slot Configuration
 xw8000 [28](#)
 xw8200 [26](#)
 software [17](#)
 space requirements [21](#)
 speakers [65](#)
 specifications
 electrical [20](#)
 hardware [22](#)
 storage
 MediaDock LVD [56](#)
 MediaDock Ultra320 [55](#)
 S-video connector [48](#)
 sync
 connector [47](#)
 HD tri-level [45](#)
 house [35](#)
 topology [37](#)
 system contents [16](#)
 documentation [17](#)
 hardware [16](#)
 software [17](#)

system inputs/outputs [33](#)
system requirements [19–22](#)
 electrical [19](#)
 environmental [19](#)
 space [21](#)

T

tablet, connecting [49](#)
Taiwan EMC regulations [77](#)
tri-level sync [45](#)

U

Unity
 See Avid Unity MediaNetwork
USB-to-MIDI converter [60](#)

V

video devices, connecting [61](#)
video LEDs [43](#)

W

Wacom tablet, connecting [49](#)
workstation
 back panel overview [25](#)
 boards [34](#)
 port locations [30](#)
 xw8000 boards [28](#)
 xw8200 boards [26](#)